

# Out of Box Demo Tutorial for xWRLx432 EVMs



# Out of Box Demo Requirements

- **Radar Sensor EVM**
  - xWRL6432
  - xWRL6432AOP
  - xWRL1432
- **MMWAVE-L-SDK**
- **Radar Toolbox**
- **Uniflash**

# Steps for Starting and Visualizing

1. **Download and Install Required Software**
2. **Set Device to “Flashing Mode”**
3. **Flash Firmware to Device with Uniflash**
4. **Set Device to “Functional Mode”**
5. **Start Visualizer**
6. **Send Configuration File**
7. **View Sensor Output**
8. **Explore Additional Examples**