ZZ7 ■ UL E-file number must be on the board.
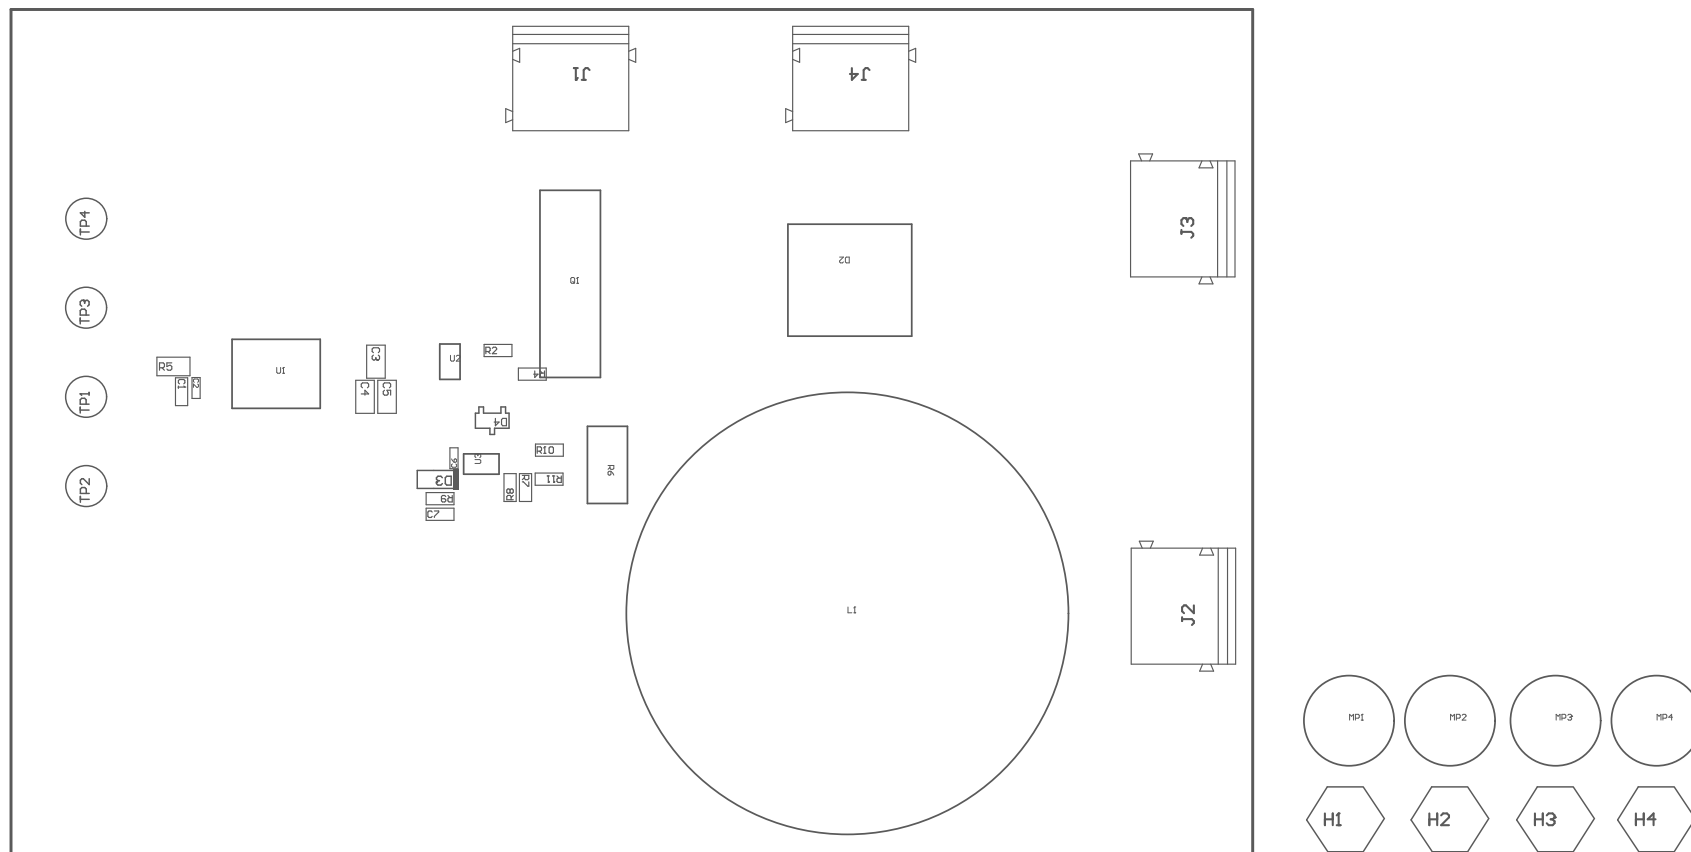
ZZ1 ■ Install label in silkscreened box after final wash. Text shall be 8 pt font. Text shall be per the Label Table in the PDF schematic.

ZZ2 ■ These assemblies are ESD sensitive, ESD precautions shall be observed.

ZZ3 ■ These assemblies must be clean and free from flux and all contaminants. Use of no clean flux is not acceptable.

ZZ4 ■ These assemblies must comply with workmanship standards IPC-A-610 Class 2, unless otherwise specified.

ZZ6 ■ Make sure that the plastic stand off bumps are high enough to avoid contact of though hole components with surfaces.

ZZ5 ■ Lead cutting after soldering. The cutting of component leads or wires after soldering shall be followed by the re-flow of the solder connection.

COMPONENTS MARKED 'DNP' SHOULD NOT BE POPULATED.
ASSEMBLY VARIANT: 001

PCB VIEWED FROM TOP SIDE	BOARD #: TIDA-050063	REV: E1	SVN REV: Not in version control
	TID #: TIDA-050063		
PLOT NAME = Top Assembly Drawing	GENERATED : 12/16/2022 6:16:50 PM		TEXAS INSTRUMENTS

COMPONENTS MARKED 'DNP' SHOULD NOT BE POPULATED.
ASSEMBLY VARIANT: 001

PCB VIEWED FROM BOTTOM SIDE	BOARD #: TIDA-050063	REV: E1	SVN REV: Not in version control
	TID #: TIDA-050063		
PLOT NAME = Bottom Assembly Drawing	GENERATED : 12/16/2022 6:16:50 PM		TEXAS INSTRUMENTS

IMPORTANT NOTICE AND DISCLAIMER