







INA226-Q1



ZHCSE07B - JULY 2015 - REVISED SEPTEMBER 2024

INA226-Q1 AEC-Q100 具有警报功能的 36V、16 位、超高精度 I²C 输出电流、 压和功率监测器

1 特性

- 具有符合 AEC-Q100 标准的下列特性:
 - 器件温度等级 1:-40°C 至 125°C
 - 器件 HBM ESD 分类等级 2
 - 器件 CDM ESD 分类等级 C4B
- 功能安全型
 - 可提供用于功能安全系统设计的文档
- 感测的总线电压范围: 0V 至 36V
- 高侧或低侧检测
- 报告电流、电压和功率
- 高精度:

- 增益误差:0.1%(最大值) 失调电压:10μV(最大值)

- 可配置均值计算选项
- 16 个可编程地址
- 由 2.7V 至 5.5V 电源供电
- 10 引脚 DGS (VSSOP) 封装

2 应用

- ADAS 域控制器
- 自主驾驶模块
- 数字驾驶舱
- 远程信息处理控制单元
- 汽车音响主机
- 车身控制模块

3 说明


INA226-Q1 是具有 I2C™ 或 SMBUS 兼容接口的电流 分流器和功率监测器。该器件同时监控分流压降和总线 电源电压。可编程校准值、转换时间、和均值计算,与 一个内部乘法器相组合,实现电流值(安培)和功率值 (瓦)的直接读取。

INA226-Q1 可在 0V 至 36V 的共模总线电压范围内感 测电流,与电源电压无关。该器件由一个 2.7V 至 5.5V 的单电源供电,汲取 330 µ A 的典型电源电流。该器件 的额定工作温度范围为 - 40°C 至 125°C, I2C 兼容接 口上具有多达 16 个可编程地址。

封装信息

器件型号	封装 ⁽¹⁾	封装尺寸 ⁽²⁾
INA226-Q1	VSSOP (10)	3.00mm × 4.90mm

- 如需了解所有可用封装,请参阅数据表末尾的可订购产品附
- 封装尺寸(长×宽)为标称值,并包括引脚(如适用)。 (2)

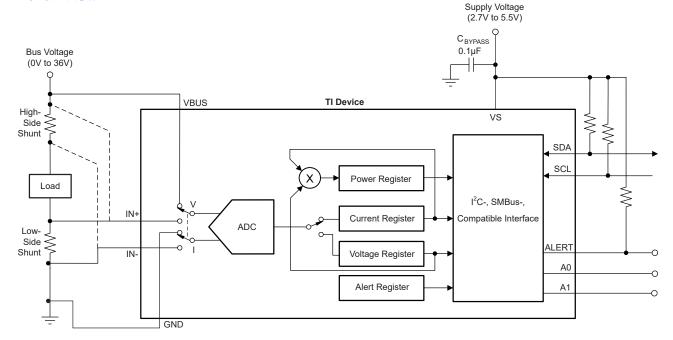

高侧或低侧感测应用



Table of Contents

1 特性1	7 Registers
2 应用1	7.1 Regis
3 说明1	8 Applicati
4 Pin Configuration and Functions3	8.1 Applic
5 Specifications4	8.2 Typic
5.1 Absolute Maximum Ratings4	8.3 Powe
5.2 ESD Ratings4	8.4 Layoı
5.3 Recommended Operating Conditions4	9 Device a
5.4 Thermal Information4	9.1 Device
5.5 Electrical Characteristics5	9.2 接收3
5.6 Typical Characteristics7	9.3 支持的
6 Detailed Description10	9.4 Trade
6.1 Overview	9.5 静电放
6.2 Functional Block Diagram10	9.6 术语表
6.3 Feature Description10	10 Revision
6.4 Device Functional Modes13	11 Mechan
6.5 Programming	Informati

/ Registers	
7.1 Register Maps	22
8 Application and Implementation	29
8.1 Application Information	
8.2 Typical Applications	29
8.3 Power Supply Recommendations	
8.4 Layout	31
9 Device and Documentation Support	32
9.1 Device Support	<mark>32</mark>
9.2 接收文档更新通知	32
9.3 支持资源	32
9.4 Trademarks	
9.5 静电放电警告	32
9.6 术语表	32
10 Revision History	3 <mark>2</mark>
11 Mechanical, Packaging, and Orderable	
Information	33



4 Pin Configuration and Functions

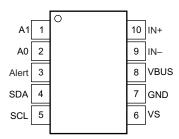


图 4-1. DGS Package 10-Pin VSSOP Top View

表 4-1. Pin Functions

PIN		Type	DESCRIPTION
NAME	NO.	Туре	DESCRIPTION
A0	2	Digital input	Address pin. Connect to GND, SCL, SDA, or VS. 表 6-2 shows pin settings and corresponding addresses.
A1	1	Digital input	Address pin. Connect to GND, SCL, SDA, or VS. 表 6-2 shows pin settings and corresponding addresses.
Alert	3	Digital output	Multi-functional alert, open-drain output.
GND	7	Analog	Ground.
IN+	10	Analog input	Connect to supply side of shunt resistor.
IN -	9	Analog input	Connect to load side of shunt resistor.
SCL	5	Digital input	Serial bus clock line, open-drain input.
SDA	4	Digital I/O	Serial bus data line, open-drain input/output.
VBUS	8	Analog input	Bus voltage input.
VS	6	Analog	Power supply, 2.7 V to 5.5 V.

Product Folder Links: INA226-Q1

3

English Data Sheet: SBOS743



5 Specifications

5.1 Absolute Maximum Ratings

over operating free-air temperature range (unless otherwise noted) (1)

1 3		MIN	MAX	UNIT
V _{VS}	Supply voltage		6	V
Analog Inputs, IN+,	Differential (V _{IN+} - V _{IN-}) ⁽²⁾	- 40	40	V
IN -	Common-Mode (V _{IN+} + V _{IN-}) / 2	- 0.3	40	V
V _{VBUS}		- 0.3	40	V
V _{SDA}		GND - 0.3	6	V
V _{SCL}		GND - 0.3	V _{VS} + 0.3	V
I _{IN}	Input current into any pin		5	mA
I _{OUT}	Open-drain digital output current		10	mA
T _J	Junction temperature		150	°C
T _{stg}	Storage temperature range	- 65	150	°C

Operation outside the Absolute Maximum Ratings may cause permanent device damage. Absolute Maximum Ratings do not imply functional operation of the device at these or any other conditions beyond those listed under Recommended Operating Conditions. If used outside the Recommended Operating Conditions but within the Absolute Maximum Ratings, the device may not be fully functional, and this may affect device reliability, functionality, performance, and shorten the device lifetime.

5.2 ESD Ratings

			VALUE	UNIT
	Human body model (HBM), per AEC Q100-002 ⁽¹⁾ HBM ESD classification level 2	±2000	V	
V _(ESD)	Electrostatic discharge	Charged device model (CDM), per AEC Q100-011 CDM ESD classification level C6	±750	v

AEC Q100-002 indicates that HBM stressing shall be in accordance with the ANSI/ESDA/JEDEC JS-001 specification.

5.3 Recommended Operating Conditions

over operating free-air temperature range (unless otherwise noted)

		MIN	NOM	MAX	UNIT
V _{CM}	Common-mode input voltage		12		V
V _{VS}	Operating supply voltage		3.3		V
T _A	Operating free-air temperature	- 40		125	°C

5.4 Thermal Information

		INA226-Q1	
	THERMAL METRIC ⁽¹⁾	DGS (VSSOP)	UNIT
		10 PINS	
R _{θ JA}	Junction-to-ambient thermal resistance	144.6	°C/W
R _{θ JC(top)}	Junction-to-case (top) thermal resistance	53.3	°C/W
R ₀ JB	Junction-to-board thermal resistance	80.4	°C/W
Ψ_{JT}	Junction-to-top characterization parameter	3.5	°C/W
Y_{JB}	Junction-to-board characterization parameter	78.9	°C/W
R _{θ JC(bot)}	Junction-to-case (bottom) thermal resistance	N/A	°C/W

For more information about traditional and new thermal metrics, see the Semiconductor and IC Package Thermal Metrics application note.

Product Folder Links: INA226-Q1 English Data Sheet: SBOS743

Copyright © 2024 Texas Instruments Incorporated

⁽²⁾ IN+ and IN - can have a differential voltage between - 40 V and 40 V. However, the voltage at these pins must not exceed the range - 0.3 V to 40 V.

5.5 Electrical Characteristics

 $T_A = 25^{\circ}C$, $V_{VS} = 3.3$ V, $V_{IN+} = 12$ V, $V_{SENSE} = (V_{IN+} - V_{IN-}) = 0$ mV and $V_{VBUS} = 12$ V, unless otherwise noted

	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
INPUT						
	Shunt voltage input range		- 81.9175		81.92	mV
	Bus voltage input range ⁽¹⁾		0		36	V
CMRR	Common-mode rejection	$0 \text{ V} \leqslant \text{V}_{\text{IN+}} \leqslant 36 \text{ V}$	126	140		dB
V _{OS}	Shunt offset voltage, RTI ⁽²⁾			±2.5	±10	μ V
	Shunt offset voltage, RTI ⁽²⁾ vs temperature	- 40°C ≤ T _A ≤ 125°C		0.02	0.1	μ V/°C
PSRR	Shunt offset voltage, RTI ⁽²⁾ vs Power supply	2.7 V ≤ VS ≤ 5.5 V		±2.5		μ V/V
V _{os}	Bus offset voltage, RTI ⁽²⁾			±1.25	±7.5	mV
	Bus offset voltage, RTI ⁽²⁾ vs temperature	- 40°C ≤ T _A ≤ 125°C		10	40	μ V/°C
PSRR	Bus offset voltage, RTI ⁽²⁾ vs power supply			±0.5		mV/V
I _B	Input bias current (I _{IN+} , I _{IN -} pins)			0.1		nA
	VBUS input impedance			830		kΩ
	Input leakage (3)	(IN+ pin) + (IN - pin), Power-down mode		0.1	0.5	μА
DC ACCU	RACY					
	ADC native resolution			16		Bits
		Shunt voltage		2.5		μ V
	1 LSB step size	Bus voltage		1.25		mV
	Shunt voltage gain error	, and the second		0.02%	0.1%	
	Shunt voltage gain error vs temperature	- 40°C ≤ T _A ≤ 125°C		10	50	ppm/°C
	Bus voltage gain error	The state of the s		0.02%	0.1%	
	Bus voltage gain error vs temperature	- 40°C ≤ T _A ≤ 125°C		10	50	ppm/°C
	Differential nonlinearity	10 0 1 1 _A 1 120 0		±0.1		LSB
		CT bit = 000		140	154	
		CT bit = 001		204	224	
		CT bit = 010		332	365	μ s
		CT bit = 011		588	646	
t _{CT}	ADC conversion time	CT bit = 100		1.1	1.21	
		CT bit = 101		2.116	2.328	
		CT bit = 110		4.156	4.572	ms
		CT bit = 111		8.244	9.068	
SMBus		OT BIL - TTT		0.244	9.000	
Ombus	SMBus timeout ⁽⁴⁾	I		28	35	ms
DIGITAL I	NPUT/OUTPUT					1113
DIGITALI	Input capacitance	I		3		pF
	Leakage input current	$ \begin{array}{c} 0 \; V \leqslant V_{SCL} \leqslant V_{VS} , \\ 0 \; V \leqslant V_{SDA} \leqslant V_{VS} , \\ 0 \; V \leqslant V_{Alert} \leqslant V_{VS} , \\ 0 \; V \leqslant V_{A0} \leqslant V_{VS} , \\ 0 \; V \leqslant V_{A1} \leqslant V_{VS} \end{array} $		0.1	1	μ A
V _{IH}	High-level input voltage		0.7×V _{VS}		6	V
V _{IL}	Low-level input voltage		- 0.5		0.3×V _{VS}	V
V _{OL}	Low-level output voltage, SDA, Alert	I _{OL} = 3 mA	0		0.4	V
-	Hysteresis			500		mV
POWER S	SUPPLY	I				
	Operating supply range		2.7		5.5	V
IQ	Quiescent current			330	420	μ A
· \					.23	£* / \

Product Folder Links: INA226-Q1

提交文档反馈

5



 $T_A = 25$ °C, $V_{VS} = 3.3$ V, $V_{IN+} = 12$ V, $V_{SENSE} = (V_{IN+} - V_{IN-}) = 0$ mV and $V_{VBUS} = 12$ V, unless otherwise noted

PARAMETER		TEST CONDITIONS	MIN	TYP	MAX	UNIT
	Quiescent current, power-down (shutdown) mode			0.5	2	μА
V _{POR}	Power-on reset threshold			2		V

- (1) While the input range is 36 V, the full-scale range of the ADC scaling is 40.96 V. See the $\frac{1}{10}$ 6.3.1. Do not apply more than 36 V.
- (2) RTI = Referred-to-input.
- (3) Input leakage is positive (current flowing into the pin) for the conditions shown at the top of this table. Negative leakage currents can occur under different input conditions.
- (4) SMBus timeout in the device resets the interface any time SCL is low for more than 28 ms.


Copyright © 2024 Texas Instruments Incorporated

3

Product Folder Links: INA226-Q1

5.6 Typical Characteristics

At $T_A = 25^{\circ}$ C, $V_{VS} = 3.3$ V, $V_{IN+} = 12$ V, $V_{SENSE} = (V_{IN+} - V_{IN-}) = 0$ mV and $V_{VBUS} = 12$ V, unless otherwise noted.

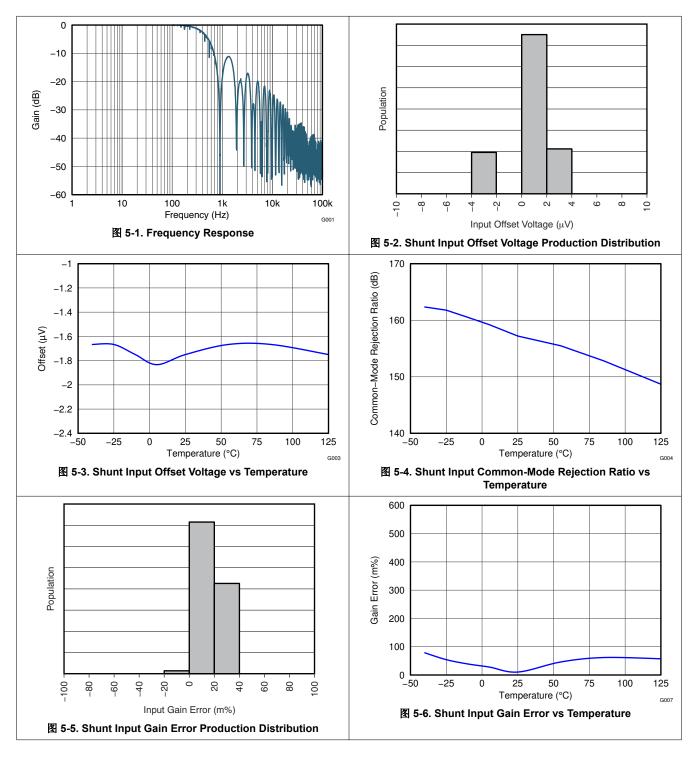

Product Folder Links: INA226-Q1

Copyright © 2024 Texas Instruments Incorporated


提交文档反馈

1



5.6 Typical Characteristics (continued)


At T_A = 25°C, V_{VS} = 3.3 V, V_{IN+} = 12 V, V_{SENSE} = (V_{IN+} - V_{IN-}) = 0 mV and V_{VBUS} = 12 V, unless otherwise noted.

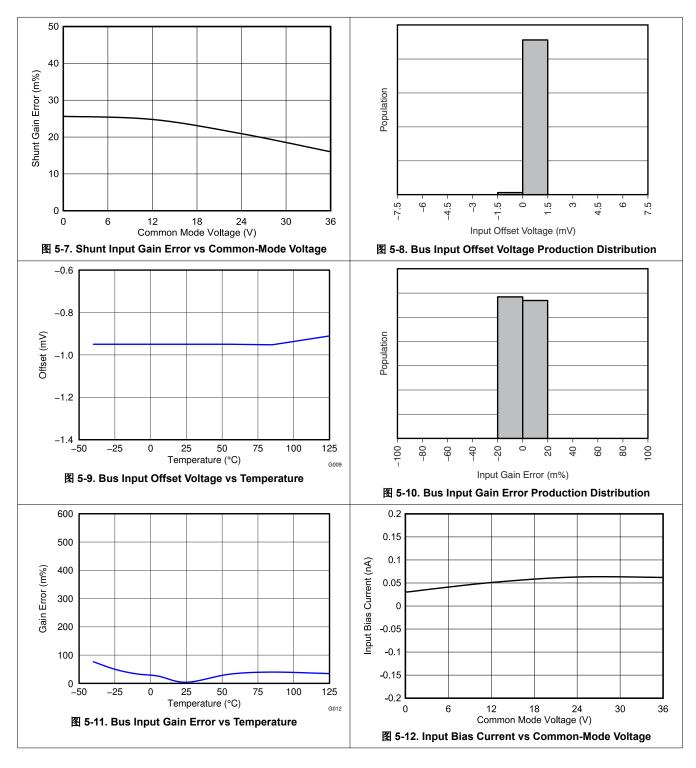



5.6 Typical Characteristics (continued)

At T_A = 25°C, V_{VS} = 3.3 V, V_{IN+} = 12 V, V_{SENSE} = (V_{IN+} - V_{IN-}) = 0 mV and V_{VBUS} = 12 V, unless otherwise noted.

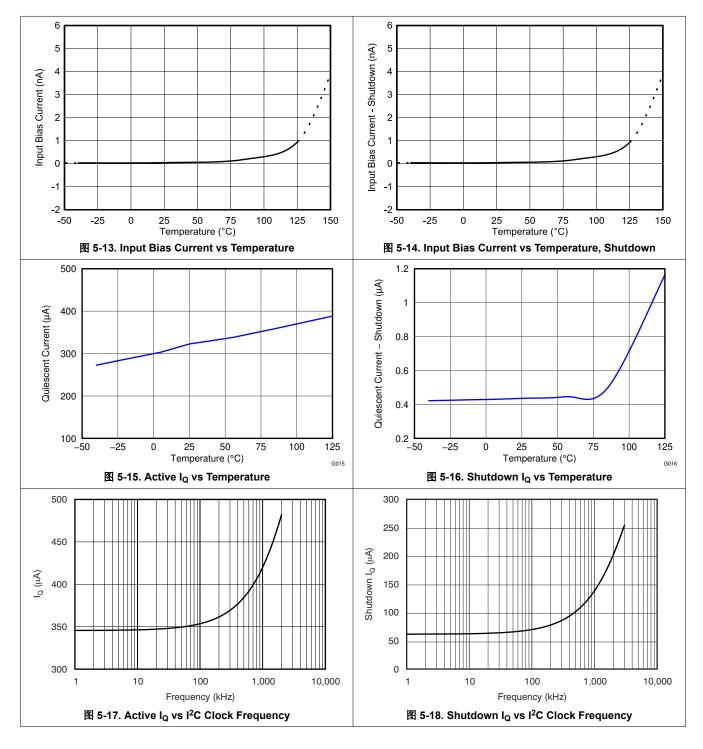




6 Detailed Description

6.1 Overview

The INA226-Q1 is a digital current sense amplifier with an I²C- and SMBus-compatible interface. The device provides digital current, voltage, and power readings necessary for accurate decision-making in precisely-controlled systems. Programmable registers allow flexible configuration for measurement resolution as well as continuous-versus-triggered operation. Detailed register information appears at the end of this data sheet. See the *Functional Block Diagram* section for a block diagram of the INA226-Q1 device.

6.2 Functional Block Diagram

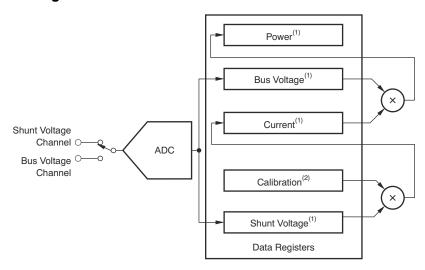

- (1) Read-only
- (2) Read/write

6.3 Feature Description

6.3.1 Basic ADC Functions

The INA226-Q1 device performs two measurements on the power-supply bus of interest. The voltage developed from the load current that flows through a shunt resistor creates a shunt voltage that is measured at the IN+ and IN - pins. The device can also measure the power supply bus voltage by connecting this voltage to the VBUS pin. The differential shunt voltage is measured with respect to the IN - pin while the bus voltage is measured with respect to ground.

The device is typically powered by a separate supply that can range from 2.7 V to 5.5 V. The bus that is being monitored can range in voltage from 0 V to 36 V. Based on the fixed 1.25-mV LSB for the Bus Voltage Register that a full-scale register results in a 40.96 V value.

备注

Do not apply more than 36 V of actual voltage to the input pins.

There are no special considerations for power-supply sequencing because the common-mode input range and power-supply voltage are independent of each other; therefore, the bus voltage can be present with the supply voltage off, and reciprocally.

The device takes two measurements, shunt voltage and bus voltage. The device then converts these measurements to current, based on the Calibration Register value, and then calculates power. Refer to the *Programming the Calibration Register* section for additional information on programming the Calibration Register.

Product Folder Links: INA226-Q1

Copyright © 2024 Texas Instruments Incorporated

The device has two operating modes, continuous and triggered, that determine how the ADC operates following these conversions. When the device is in the normal operating mode (that is, MODE bits of the Configuration Register (00h) are set to '111'), the device continuously converts a shunt voltage reading followed by a bus voltage reading. After the shunt voltage reading, the current value is calculated (based on 方程式 3). This current value is then used to calculate the power result (using 方程式 4). These values are subsequently stored in an accumulator, and the measurement/calculation sequence repeats until the number of averages set in the Configuration Register (00h) is reached. Following every sequence, the present set of values measured and calculated are appended to previously collected values. After all of the averaging has been completed, the final values for shunt voltage, bus voltage, current, and power are updated in the corresponding registers that can then be read. These values remain in the data output registers until the values are replaced by the next fully completed conversion results. Reading the data output registers does not affect a conversion in progress.

The mode control in the Conversion Register (00h) also permits selecting modes to convert only the shunt voltage or the bus voltage to further allow the user to configure the monitoring function to fit the specific application requirements.

All current and power calculations are performed in the background and do not contribute to conversion time.

In triggered mode, writing any of the triggered convert modes into the Configuration Register (00h) (that is, MODE bits of the Configuration Register (00h) are set to '001', '010', or '011') triggers a single-shot conversion. This action produces a single set of measurements; thus, to trigger another single-shot conversion, the Configuration Register (00h) must be written to a second time, even if the mode does not change.

In addition to the two operating modes (continuous and triggered), the device also has a power-down mode that reduces the quiescent current and turns off current into the device inputs, reducing the impact of supply drain when the device is not being used. Full recovery from power-down mode requires 40µs. The registers of the device can be written to and read from while the device is in power-down mode. The device remains in power-down mode until one of the active modes settings are written into the Configuration Register (00h).

Although the device can be read at any time, and the data from the last conversion remain available, the Conversion Ready flag bit (Mask/Enable Register, CVRF bit) is provided to help coordinate one-shot or triggered conversions. The Conversion Ready flag (CVRF) bit is set after all conversions, averaging, and multiplication operations are complete.

The Conversion Ready flag (CVRF) bit clears under these conditions:

- Writing to the Configuration Register (00h), except when configuring the MODE bits for power-down mode; or
- Reading the Mask/Enable Register (06h)

6.3.1.1 Power Calculation

The Current and Power are calculated following shunt voltage and bus voltage measurements as shown in \$\mathbb{E}\$ 6-1. Current is calculated following a shunt voltage measurement based on the value set in the Calibration Register. If there is no value loaded into the Calibration Register, the current value stored is zero. Power is calculated following the bus voltage measurement based on the previous current calculation and bus voltage measurement. If there is no value loaded in the Calibration Register, the power value stored is also zero. Again, these calculations are performed in the background and do not add to the overall conversion time. These current and power values are considered intermediate results (unless the averaging is set to 1) and are stored in an internal accumulation register, not the corresponding output registers. Following every measured sample, the newly-calculated values for current and power are appended to this accumulation register until all of the samples have been measured and averaged based on the number of averages set in the Configuration Register (00h).

Copyright © 2024 Texas Instruments Incorporated

Product Folder Links: INA226-Q1

提交文档反馈



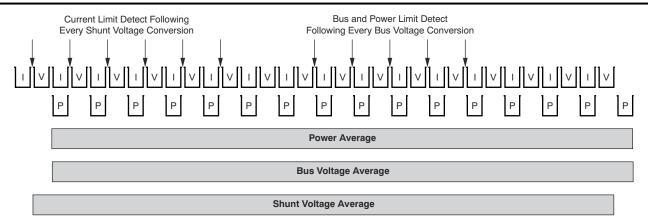


图 6-1. Power Calculation Scheme

In addition to the current and power accumulating after every sample, the shunt and bus voltage measurements are also collected. After all of the samples have been measured and the corresponding current and power calculations have been made, the accumulated average for each of these parameters is then loaded to the corresponding output registers, where the average can then be read.

6.3.1.2 Alert Pin

The INA226-Q1 has a single Alert Limit Register (07h), that allows the Alert pin to be programmed to respond to a single user-defined event or to a Conversion Ready notification if desired. The Mask/Enable Register allows the user to select from one of the five available functions to monitor and/or set the Conversion Ready bit to control the response of the Alert pin. Based on the function being monitored, the user then enters a value into the Alert Limit Register to set the corresponding threshold value that asserts the Alert pin.

The Alert pin allows for one of several available alert functions to be monitored to determine if a user-defined threshold has been exceeded. The five alert functions that can be monitored are:

- Shunt Voltage Over-Limit (SOL)
- Shunt Voltage Under-Limit (SUL)
- Bus Voltage Over-Limit (BOL)
- Bus Voltage Under-Limit (BUL)
- Power Over-Limit (POL)

The Alert pin is an open-drain output. This pin is asserted when the alert function selected in the Mask/Enable Register exceeds the value programmed into the Alert Limit Register. Only one of these alert functions can be enabled and monitored at a time. If multiple alert functions are enabled, the selected function in the highest significant bit position takes priority and responds to the Alert Limit Register value. For example, if the Shunt Voltage Over-Limit function and the Shunt Voltage Under-Limit function are both selected, the Alert pin asserts when the Shunt Voltage Register exceeds the value in the Alert Limit Register.

The Conversion Ready state of the device can also be monitored at the Alert pin to inform the user when the device has completed the previous conversion and is ready to begin a new conversion. Conversion Ready can be monitored at the Alert pin along with one of the alert functions. If an alert function and the Conversion Ready are both enabled to be monitored at the Alert pin, after the Alert pin is asserted, the Mask/Enable Register must be read following the alert to determine the source of the alert. By reading the Conversion Ready Flag (CVRF, bit 3), and the Alert Function Flag (AFF, bit 4) in the Mask/Enable Register, the source of the alert can be determined. If the Conversion Ready feature is not desired and the CNVR bit is not set, the Alert pin only responds to an exceeded alert limit based on the alert function enabled.

If the alert function is not used, the Alert pin can be left floating without impacting the operation of the device.

Refer to 🖺 6-1 to see the relative timing of when the value in the Alert Limit Register is compared to the corresponding converted value. For example, if the alert function that is enabled is Shunt Voltage Over-Limit

Product Folder Links: INA226-Q1

(SOL), following every shunt voltage conversion the value in the Alert Limit Register is compared to the measured shunt voltage to determine if the measurements has exceeded the programmed limit. The AFF, bit 4 of the Mask/Enable Register, asserts high any time the measured voltage exceeds the value programmed into the Alert Limit Register. In addition to the AFF being asserted, the Alert pin is asserted based on the Alert Polarity Bit (APOL, bit 1 of the Mask/Enable Register). If the Alert Latch is enabled, the AFF and Alert pin remain asserted until either the Configuration Register (00h) is written to or the Mask/Enable Register is read.

The Bus Voltage alert functions compare the measured bus voltage to the Alert Limit Register following every bus voltage conversion and assert the AFF bit and Alert pin if the limit threshold is exceeded.

The Power Over-Limit alert function is also compared to the calculated power value following every bus voltage measurement conversion and asserts the AFF bit and Alert pin if the limit threshold is exceeded.

6.4 Device Functional Modes

6.4.1 Averaging and Conversion Time Considerations

The INA226-Q1 device offers programmable conversion times (t_{CT}) for both the shunt voltage and bus voltage measurements. The conversion times for these measurements can be selected from as fast as 140 $\,\mu$ s to as long as 8.244 ms. The conversion time settings, along with the programmable averaging mode, allow the device to be configured to optimize the available timing requirements in a given application. For example, if a system requires that data be read every 5ms, the device can be configured with the conversion times set to 588 $\,\mu$ s for both shunt and bus voltage measurements and the averaging mode set to 4. This configuration results in the data updating approximately every 4.7ms. The device can also be configured with a different conversion time setting for the shunt and bus voltage measurements. This type of approach is common in applications where the bus voltage tends to be relatively stable. This situation can allow for the time focused on the bus voltage measurement to be reduced relative to the shunt voltage measurement. The shunt voltage conversion time can be set to 4.156 ms with the bus voltage conversion time set to 588 $\,\mu$ s, with the averaging mode set to 1. This configuration also results in data updating approximately every 4.7 ms.

There are trade-offs associated with the settings for conversion time and the averaging mode used. The averaging feature can significantly improve the measurement accuracy by effectively filtering the signal. This approach allows the device to reduce any noise in the measurement that can be caused by noise coupling into the signal. A greater number of averages enables the device to be more effective in reducing the noise component of the measurement.

The conversion times selected can also have an impact on the measurement accuracy.

6-2 shows multiple conversion times to illustrate the impact of noise on the measurement to achieve the highest accuracy measurement possible, use a combination of the longest allowable conversion times and highest number of averages, based on the timing requirements of the system.

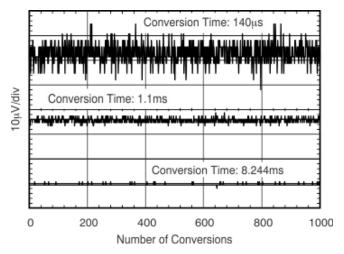


图 6-2. Noise vs Conversion Time

Product Folder Links: INA226-Q1

提交文档反馈

13

灰义人归义顷

6.4.2 Filtering and Input Considerations

Measuring current is often noisy, and such noise can be difficult to define. The INA226-Q1 device offers several options for filtering by allowing the conversion times and number of averages to be selected independently in the Configuration Register (00h). The conversion times can be set independently for the shunt voltage and bus voltage measurements to allow added flexibility in configuring the monitoring of the power-supply bus.

The internal ADC is based on a delta-sigma (Δ Σ) front-end with a 500 kHz (±30%) typical sampling rate. This architecture has good inherent noise rejection; however, transients that occur at or very close to the sampling rate harmonics can cause problems. Because these signals are at 1 MHz and higher, the signals can be managed by incorporating filtering at the input of the device. The high frequency enables the use of low-value series resistors on the filter with negligible effects on measurement accuracy. In general, filtering the device input is only necessary if there are transients at exact harmonics of the 500 kHz (±30%) sampling rate (greater than 1 MHz). Filter using the lowest possible series resistance (typically 10 Ω or less) and a ceramic capacitor. Recommended values for this capacitor are between 0.1 μ F and 1 μ F. Ξ 6-3 shows the device with a filter added at the input.

Overload conditions are another consideration for the device inputs. The device inputs are specified to tolerate 40 V across the inputs. A large differential scenario can be a short to ground on the load side of the shunt. This type of event can result in full power-supply voltage across the shunt (as long the power supply or energy storage capacitors support the voltage). Removing a short to ground can result in inductive kickbacks that can exceed the 40-V differential and common-mode rating of the device. Inductive kickback voltages are best controlled by Zener-type transient-absorbing devices (commonly called *transzorbs*) combined with sufficient energy storage capacitance. See the TI Design, *Transient Robustness for Current Shunt Monitors* (TIDU473), which describes a high-side current shunt monitor used to measure the voltage developed across a current-sensing resistor when current passes through the resistor.

In applications that do not have large energy storage electrolytics on one or both sides of the shunt, an input overstress condition can result from an excessive dV/dt of the voltage applied to the input. A hard physical short is the most likely cause of this event, particularly in applications with no large electrolytics present. This problem occurs because an excessive dV/dt can activate the ESD protection in the device in systems where large currents are available. Testing demonstrates that the addition of $10-\Omega$ resistors in series with each input of the device sufficiently protects the inputs against this dV/dt failure up to the 40-V rating of the device. Selecting these resistors in the range noted has minimal effect on accuracy.

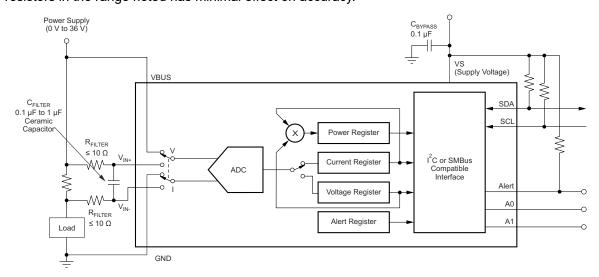


图 6-3. Input Filtering

Copyright © 2024 Texas Instruments Incorporated

6.5 Programming

An important aspect of the INA226-Q1 is that the device does not necessarily measure current or power. The device measures both the differential voltage applied between the IN+ and IN- input pins and the voltage applied to the VBUS pin. For the device to report both current and power values, the user must program the resolution of the Current Register (04h) and the value of the shunt resistor present in the application to develop the differential voltage applied between the input pins. The Power Register (03h) is internally set to be 25 times the programmed Current_LSB. Both the Current_LSB and shunt resistor value are used in the calculation of the Calibration Register value the device uses to calculate the corresponding current and power values based on the measured shunt and bus voltages.

The Calibration Register is calculated based on 方程式 1. This equation includes the term Current_LSB, which is the programmed value for the LSB for the Current Register (04h). The user uses this value to convert the value in the Current Register (04h) to the actual current in amperes. The highest resolution for the Current Register (04h) can be obtained by using the smallest allowable Current_LSB based on the maximum expected current as shown in 方程式 2. While this value yields the highest resolution, selecting a value for the Current_LSB to the nearest round number above this value is common to simplify the conversion of the Current Register (04h) and Power Register (03h) to amperes and watts respectively. The R_{SHUNT} term is the value of the external shunt used to develop the differential voltage across the input pins.

$$CAL = \frac{0.00512}{Current_LSB \times R_{SHUNT}}$$
 (1)

where

• 0.00512 is an internal fixed value used to verify scaling is maintained properly

$$Current_LSB = \frac{Maximum Expected Current}{2^{15}}$$
 (2)

After programming the Calibration Register, the Current Register (04h) and Power Register (03h) update accordingly based on the corresponding shunt voltage and bus voltage measurements. Until the Calibration Register is programmed, the Current Register (04h) and Power Register (03h) remain at zero.

6.5.1 Programming the Calibration Register

8-1 shows a nominal 10-A load that creates a differential voltage of 20 mV across a 2-m Ω shunt resistor. The bus voltage for the INA226-Q1 is measured at the external VBUS input pin, which in this example is connected to the IN – pin to measure the voltage level delivered to the load. For this example, the VBUS pin measures less than 12 V because the voltage at the IN – pin is 11.98 V as a result of the voltage drop across the shunt resistor.

For this example, assuming a maximum expected current of 15 A, the Current_LSB is calculated to be 457.7 μ A/bit using \hbar 2. Using a value for the Current_LSB of 500 μ A/Bit or 1 mA/Bit significantly simplifies the conversion from the Current Register (04h) and Power Register (03h) to amperes and watts. For this example, a value of 1 mA/bit is selected for the Current_LSB. Using this value for the Current_LSB does trade a small amount of resolution for having a simpler conversion process on the user side. Using \hbar 1 in this example with a Current_LSB value of 1 mA/bit and a shunt resistor of 2 m Ω results in a Calibration Register value of 2560, or A00h.

The Current Register (04h) is then calculated by multiplying the decimal value of the Shunt Voltage Register (01h) contents by the decimal value of the Calibration Register and then dividing by 2048, as shown in 18. For this example, the Shunt Voltage Register contains a value of 8,000 (representing 20 mV), which is multiplied by the Calibration Register value of 2560 and then divided by 2048 to yield a decimal value for the Current Register (04h) of 10000, or 2710h. Multiplying this value by 1 mA/bit results in the original 10-A level stated in the example.

$$Current = \frac{ShuntVoltage \times CalibrationRegister}{2048}$$
 (3)

Product Folder Links: INA226-Q1

Copyright © 2024 Texas Instruments Incorporated

提交文档反馈

15



The LSB for the Bus Voltage Register (02h) is a fixed 1.25 mV/bit, which means that the 11.98 V present at the VBUS pin results in a register value of 2570h, or a decimal equivalent of 9584. Note that the MSB of the Bus Voltage Register (02h) is always zero because the VBUS pin is only able to measure positive voltages.

The Power Register (03h) is then be calculated by multiplying the decimal value of the Current Register, 10000, by the decimal value of the Bus Voltage Register (02h), 9584, and then dividing by 20,000, as defined in 5 Register (03h) is 12B8h, or a decimal equivalent of 4792. Multiplying this result by the power LSB (25 times the [1 × 10 $^{-3}$ Current_LSB]) results in a power calculation of (4792 × 25 mW/bit), or 119.82 W. The power LSB has a fixed ratio to the Current_LSB of 25. For this example, a programmed 1 mA/bit Current_LSB results in a power LSB of 25 mW/bit. This ratio is internally programmed to verify that the scaling of the power calculation is within an acceptable range. A manual calculation for the power being delivered to the load uses a bus voltage of 11.98 V (12 V_{CM} $^-$ 20 mV shunt drop) multiplied by the load current of 10 A to give a result of 119.8 W.

$$Power = \frac{Current \times BusVoltage}{20000}$$
 (4)

表 6-1 lists the steps for configuring, measuring, and calculating the values for current and power for this device.

STEP	REGISTER NAME	ADDRESS	CONTENTS	DEC	LSB	VALUE (1)
Step 1	Configuration Register	00h	4127h	_	_	_
Step 2	Shunt Register	01h	1F40h	8000	2.5 μV	20 mV
Step 3	Bus Voltage Register	02h	2570h	9584	1.25 mV	11.98 V
Step 4	Step 4 Calibration Register		A00h	2560	_	_
Step 5 Current Register		04h	2710	10000	1 mA	10 A
Step 6	Power Register	03h	12B8h	4792	25 mW	119.82 W

表 6-1. Calculating Current and Power

(1) Conditions: Load = 10 A, V_{CM} = 12 V, R_{SHUNT} = 2 m Ω , and V_{VBUS} = 12 V.

6.5.2 Programming the Power Measurement Engine

6.5.2.1 Calibration Register and Scaling

The Calibration Register enables the user to scale the Current Register (04h) and Power Register (03h) to the most useful value for a given application. For example, set the Calibration Register such that the largest possible number is generated in the Current Register (04h) or Power Register (03h) at the expected full-scale point. This approach yields the highest resolution using the previously calculated minimum Current_LSB in the equation for the Calibration Register. The Calibration Register can also be selected to provide values in the Current Register (04h) and Power Register (03h) that either provide direct decimal equivalents of the values being measured, or yield a round LSB value for each corresponding register. After these choices are made, the Calibration Register also offers possibilities for end user system-level calibration. After determining the exact current by using an external ammeter, the value of the Calibration Register can then be adjusted based on the measured current result of the INA226-Q1 to cancel the total system error as shown in \hbar 25.

$$Corrected_Full_Scale_Cal = trunc \left[\frac{Cal \times MeasShuntCurrent}{Device_Current} \right]$$
 (5)

6.5.3 Simple Current Shunt Monitor Usage (No Programming Necessary)

The device can be used without any programming if reading a shunt voltage drop and bus voltage with the default power-on reset configuration and continuous conversion of shunt and bus voltages is only necessary.

Without programming the device Calibration Register, the device is unable to provide either a valid current or power value, because these outputs are both derived using the values loaded into the Calibration Register.

Product Folder Links: INA226-Q1

Copyright © 2024 Texas Instruments Incorporated

6.5.4 Default Settings

The default power-up states of the registers are shown in the *Register Maps* section of this data sheet. These registers are volatile, and if programmed to a value other than the default values shown in 表 7-1, the registers must be re-programmed at every device power-up. Detailed information on programming the Calibration Register specifically is given in the *Programming* section and calculated based on 方程式 1.

6.5.5 Bus Overview

The INA226-Q1 offers compatibility with both I^2C and SMBus interfaces. The I^2C and SMBus protocols are essentially compatible with one another.

The I²C interface is used throughout this data sheet as the primary example, with SMBus protocol specified only when a difference between the two systems is discussed. Two lines, SCL and SDA, connect the device to the bus. Both SCL and SDA are open-drain connections.

The device that initiates a data transfer is called a *master*, and the devices controlled by the master are *slaves*. The bus must be controlled by a master device that generates the serial clock (SCL), controls the bus access, and generates START and STOP conditions.

To address a specific device, the master initiates a start condition by pulling the data signal line (SDA) from a high to a low logic level while SCL is high. All slaves on the bus shift in the slave address byte on the rising edge of SCL, with the last bit indicating whether a read or write operation is intended. During the ninth clock pulse, the slave being addressed responds to the master by generating an Acknowledge and pulling SDA low.

Data transfer is then initiated and eight bits of data are sent, followed by an *Acknowledge* bit. During data transfer, SDA must remain stable while SCL is high. Any change in SDA while SCL is high is interpreted as a start or stop condition.

After all data have been transferred, the master generates a stop condition, indicated by pulling SDA from low to high while SCL is high. The device includes a 28 ms timeout on the interface to prevent locking up the bus.

Copyright © 2024 Texas Instruments Incorporated

提交文档反馈

17

6.5.5.1 Serial Bus Address

To communicate with the INA226-Q1, the master must first address slave devices via a slave address byte. The slave address byte consists of seven address bits and a direction bit that indicates whether the action is to be a read or write operation.

The device has two address pins, A0 and A1. 表 6-2 lists the pin logic levels for each of the 16 possible addresses. The device samples the state of pins A0 and A1 on every bus communication. Establish the pin states before any activity on the interface occurs.

		ana dia 10 / taan 00000
A 1	A0	SLAVE ADDRESS
GND	GND	1000000
GND	VS	1000001
GND	SDA	1000010
GND	SCL	1000011
VS	GND	1000100
VS	VS	1000101
VS	SDA	1000110
VS	SCL	1000111
SDA	GND	1001000
SDA	VS	1001001
SDA	SDA	1001010
SDA	SCL	1001011
SCL	GND	1001100
SCL	VS	1001101
SCL	SDA	1001110
SCL	SCL	1001111

表 6-2. Address Pins and Slave Addresses

6.5.5.2 Serial Interface

The INA226-Q1 operates only as a slave device on both the I²C bus and the SMBus. Connections to the bus are made using the open-drain SDA and SCL lines. The SDA and SCL pins feature integrated spike suppression filters and Schmitt triggers to minimize the effects of input spikes and bus noise. Although the device integrates spike suppression into the digital I/O lines, proper layout techniques help minimize the amount of coupling into the communication lines. This noise introduction can occur from capacitively coupling signal edges between the two communication lines themselves or from other switching noise sources present in the system. Routing traces in parallel with ground in between layers on a printed circuit board (PCB) typically reduces the effects of coupling between the communication lines. Shielded communication lines reduces the possibility of unintended noise coupling into the digital I/O lines that can be incorrectly interpreted as start or stop commands.

The INA226-Q1 supports the transmission protocol for fast mode (1 kHz to 400 kHz) and high-speed mode (1 kHz to 2.94 MHz). All data bytes are transmitted most significant byte first.

6.5.5.3 Writing to and Reading From the INA226-Q1

Accessing a specific register on the INA226-Q1 is accomplished by writing the appropriate value to the register pointer. Refer to $\frac{1}{8}$ 7-1 for a complete list of registers and corresponding addresses. The value for the register pointer (as shown in $\frac{1}{8}$ 6-7) is the first byte transferred after the slave address byte with the R/ $\frac{1}{8}$ bit low. Every write operation to the device requires a value for the register pointer.

Writing to a register begins with the first byte transmitted by the master. This byte is the slave address, with the R/\overline{W} bit low. The device then acknowledges receipt of a valid address. The next byte transmitted by the master is the address of the register which data is written to. This register address value updates the register pointer to the desired register. The next two bytes are written to the register addressed by the register pointer. The device

Copyright © 2024 Texas Instruments Incorporated


acknowledges receipt of each data byte. The master can terminate data transfer by generating a start or stop condition.

When reading from the device, the last value stored in the register pointer by a write operation determines which register is read during a read operation. To change the register pointer for a read operation, a new value must be written to the register pointer. This write is accomplished by issuing a slave address byte with the R/ \overline{W} bit low, followed by the register pointer byte. No additional data are required. The master then generates a start condition and sends the slave address byte with the R/ \overline{W} bit high to initiate the read command. The next byte is transmitted by the slave and is the most significant byte of the register indicated by the register pointer. This byte is followed by an *Acknowledge* from the master; then the slave transmits the least significant byte. The master acknowledges receipt of the data byte. The master can terminate data transfer by generating a *Not-Acknowledge* after receiving any data byte, or generating a start or stop condition. If repeated reads from the same register are desired, continually sending the register pointer bytes is not necessary; the device retains the register pointer value until the value is changed by the next write operation.

图 6-4 shows the write operation timing diagram. 图 6-5 shows the read operation timing diagram.


备注

Register bytes are sent most-significant byte first, followed by the least significant byte.



1. The value of the Slave Address byte is determined by the settings of the A0 and A1 pins. Refer to 表 6-2.

图 6-4. Timing Diagram for Write Word Format

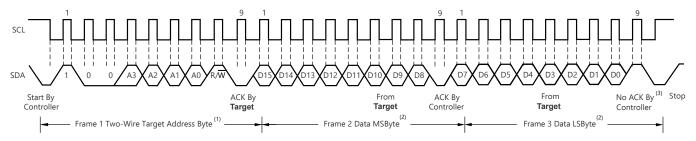

- 1. The value of the Slave Address byte is determined by the settings of the A0 and A1 pins. Refer to 表 6-2.
- 2. Read data is from the last register pointer location. If a new register is desired, the register pointer must be updated. See 🛭 6-7.
- 3. ACK by Master can also be sent.


图 6-5. Timing Diagram for Read Word Format

Copyright © 2024 Texas Instruments Incorporated

提交文档反馈


19



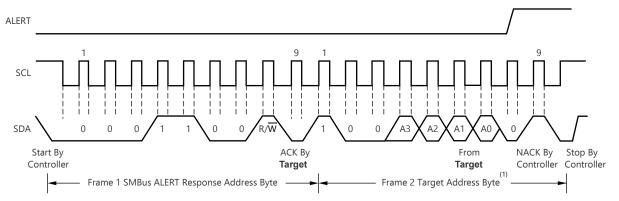

1. The value of the Slave Address Byte is determined by the settings of the A0 and A1 pins. Refer to 表 6-2.

图 6-6. Timing Diagram for SMBus ALERT

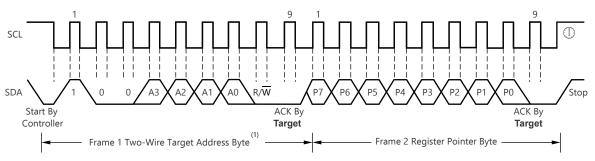

1. The value of the Slave Address Byte is determined by the settings of the A0 and A1 pins. Refer to 表 6-2.

图 6-7. Typical Register Pointer Set

6.5.5.3.1 High-Speed I²C Mode

When the bus is idle, both the SDA and SCL lines are pulled high by the pullup resistors. The master generates a start condition followed by a valid serial byte containing high-speed (HS) master code 00001XXX. This transmission is made in fast (400 kHz) or standard (100 kHz) (F/S) mode at no more than 400 kHz. The device does not acknowledge the HS master code, but does recognize the code and switches the internal filters to support 2.94 MHz operation.

The master then generates a repeated start condition (a repeated start condition has the same timing as the start condition). After this repeated start condition, the protocol is the same as F/S mode, except that transmission speeds up to 2.94 MHz are allowed. Instead of using a stop condition, use repeated start conditions to secure the bus in HS-mode. A stop condition ends the HS-mode and switches all the internal filters of the device to support the F/S mode.

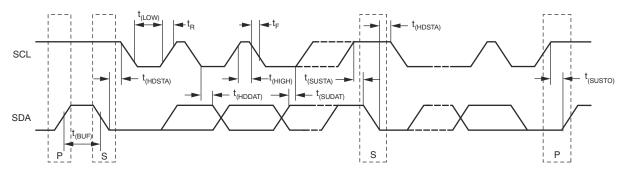


图 6-8. Bus Timing Diagram

Copyright © 2024 Texas Instruments Incorporated

表 6-3. Bus Timing Diagram Definitions (1)

	9 = .~9. ~.	= •	•		
	FAST	MODE	HIGH-SPE	ED MODE	
	MIN	MAX	MIN	MAX	UNIT
f _(SCL)	0.001	0.4	0.001	2.94	MHz
t _(BUF)	600		160		ns
t _(HDSTA)	100		100		ns
t _(SUSTA)	100		100		ns
t _(SUSTO)	100		100		ns
t _(HDDAT)	10	900	10	100	ns
t _(SUDAT)	100		20		ns
t _(LOW)	1300		200		ns
t _(HIGH)	600		60		ns
t _F		300		80	ns
t _F		300		40	ns
t _R		300		40	ns
t _R		1000			ns
	f(SCL) t(BUF) t(HDSTA) t(SUSTA) t(SUSTO) t(HDDAT) t(SUDAT) t(LOW) t(HIGH) tF	FAST MIN f(SCL) 0.001 t(BUF) 600 t(HDSTA) 100 t(SUSTA) 100 t(SUSTO) 100 t(HDDAT) 10 t(SUDAT) 100 t(LOW) 1300 t(HIGH) 600 tF tF tF tR	FAST MODE MIN MAX	MIN MAX MIN f(SCL) 0.001 0.4 0.001 t(BUF) 600 160 t(HDSTA) 100 100 t(SUSTA) 100 100 t(SUSTO) 100 100 t(HDDAT) 10 900 10 t(SUDAT) 100 20 t(LOW) 1300 200 t(HIGH) 600 60 tF 300 300 tR 300 300	FAST MODE

⁽¹⁾ Values based on a statistical analysis of a one-time sample of devices. Minimum and maximum values are not guaranteed and not production tested.

6.5.5.4 SMBus Alert Response

The INA226-Q1 is designed to respond to the SMBus Alert Response address. The SMBus Alert Response provides a quick fault identification for simple slave devices. When an Alert occurs, the master can broadcast the Alert Response slave address (0001 100) with the Read/Write bit set high. Following this Alert Response, any slave device that generates an alert identifies the slave device by acknowledging the Alert Response and sending the address on the bus.

The Alert Response can activate several different slave devices simultaneously, similar to the I²C General Call. If more than one slave attempts to respond, bus arbitration rules apply. The losing device does not generate an Acknowledge and continues to hold the Alert line low until the interrupt is cleared.

7 Registers

7.1 Register Maps

The INA226-Q1 uses a bank of registers for holding configuration settings, measurement results, minimum/ maximum limits, and status information. 表 7-1 summarizes the device registers; refer to the *Functional Block Diagram* section for an illustration of the registers.

All 16-bit device registers are two 8-bit bytes via the I²C interface.

表 7-1. Register Set Summary

POINTER ADDRESS			POWER-ON RES	ET	
HEX	REGISTER NAME	FUNCTION	BINARY	HEX	TYPE ⁽¹⁾
00h	Configuration Register	All-register reset, shunt voltage and bus voltage ADC conversion times and averaging, operating mode.	01000001 00100111	4127	R/ ₩
01h	Shunt Voltage Register	Shunt voltage measurement data.	00000000 00000000	0000	R
02h	Bus Voltage Register	Bus voltage measurement data.	00000000 00000000	0000	R
03h	Power Register ⁽²⁾	Contains the value of the calculated power being delivered to the load.	00000000 00000000	0000	R
04h	Current Register ⁽²⁾	Contains the value of the calculated current flowing through the shunt resistor.	00000000 00000000	0000	R
05h	Calibration Register	Sets full-scale range and LSB of current and power measurements. Overall system calibration.	00000000 00000000	0000	R/ ₩
06h	Mask/Enable Register	Alert configuration and Conversion Ready flag.	00000000 00000000	0000	R/W
07h	Alert Limit Register	Contains the limit value to compare to the selected Alert function.	00000000 00000000	0000	R/W
FEh	Manufacturer ID Register	Contains unique manufacturer identification number.	0101010001001001	5449	R
FFh	Die ID Register	Contains unique die identification number.	0010001001100000	2260	R

⁽¹⁾ Type: **R** = Read-Only, **R**/ **W** = Read/Write.

7.1.1 Configuration Register (00h) (Read/Write)

表 7-2. Configuration Register (00h) (Read/Write) Descriptions

BIT NO.	D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
BIT NAME	RST	_		_	AVG2	AVG1	AVG0	VBUSCT2	VBUSCT1	VBUSCT0	VSHCT2	VSHCT1	VSHCT0	MODE3	MODE2	MODE1
POR VALUE	0	1	0	0	0	0	0	1	0	0	1	0	0	1	1	1

The Configuration Register settings control the operating modes for the device. This register controls the conversion time settings for both the shunt and bus voltage measurements as well as the averaging mode used. The operating mode that controls what signals are selected to be measured is also programmed in the Configuration Register.

The Configuration Register can be read from at any time without impacting or affecting the device settings or a conversion in progress. Writing to the Configuration Register halts any conversion in progress until the write sequence is completed resulting in a new conversion starting based on the new contents of the Configuration Register (00h). This halt prevents any uncertainty in the conditions used for the next completed conversion.

Copyright © 2024 Texas Instruments Incorporated Product Folder Links: *INA226-Q1*

⁽²⁾ The Current Register (04h) and Power Register (03h) default to '0' because the Calibration register defaults to '0', yielding zero current and power values until the Calibration register is programmed.

Instruments www.ti.com.cn

RST: **Reset Bit**

Bit 15 Setting this bit to '1' generates a system reset that is the same as power-on reset. Resets all registers to default

values; this bit self-clears.

AVG: **Averaging Mode**

Bits 9 - 11 Determines the number of samples that are collected and averaged. 表 7-3 shows all the AVG bit settings and related number of averages for each bit setting.

表 7-3. AVG Bit Settings[11:9] Combinations

W C Dit Cotti	ngs[ii.s] oc	//////////////////////////////////////
AVG1 D10	AVG0 D9	NUMBER OF AVERAGES ⁽¹⁾
0	0	1
0	1	4
1	0	16
1	1	64
0	0	128
0	1	256
1	0	512
1	1	1024
	AVG1	D10 D9 0 0 0 1 1 0 1 1 0 0 0 1

Shaded values are default. (1)

VBUSCT: **Bus Voltage Conversion Time**

Bits 6 - 8 Sets the conversion time for the bus voltage measurement. 表 7-4 shows the VBUSCT bit options and related conversion times for each bit setting.

表 7-4. VBUSCT Bit Settings [8:6] Combinations

VBUSCT2 D8	VBUSCT1 D7	VBUSCT0 D6	CONVERSION TIME ⁽¹⁾
0	0	0	140 µs
0	0	1	204 µs
0	1	0	332 µs
0	1	1	588 µs
1	0	0	1.1 ms
1	0	1	2.116 ms
1	1	0	4.156 ms
1	1	1	8.244 ms

(1) Shaded values are default.

VSHCT: **Shunt Voltage Conversion Time**

Copyright © 2024 Texas Instruments Incorporated

Bits 3 - 5 Sets the conversion time for the shunt voltage measurement. 表 7-5 shows the VSHCT bit options and related conversion times for each bit setting.

表 7-5. VSHCT Bit Settings [5:3] Combinations

VSHCT2 D8	VSHCT1 D7	VSHCT0 D6	CONVERSION TIME ⁽¹⁾
0	0	0	140 µs
0	0	1	204 μs
0	1	0	332 µs
0	1	1	588 µs
1	0	0	1.1 ms
1	0	1	2.116 ms
1	1	0	4.156 ms

Product Folder Links: INA226-Q1

提交文档反馈



表 7-5. VSHCT Bit Settings [5:3] Combinations

(续)

VSHCT2	VSHCT1	VSHCT0	CONVERSION
D8	D7	D6	TIME ⁽¹⁾
1	1	1	

(1) Shaded values are default.

MODE: Operating Mode

Bits 0-2

Selects continuous, triggered, or power-down mode of operation. These bits default to continuous shunt and bus measurement mode. The mode settings are shown in $\frac{1}{8}$ 7-6.

表 7-6. Mode Settings [2:0] Combinations

w.		rungo L-io	1 0011101110110
MODE3 D2	MODE2 D1	MODE1 D0	MODE ⁽¹⁾
0	0	0	Power-Down (or Shutdown)
0	0	1	Shunt Voltage, Triggered
0	1	0	Bus Voltage, Triggered
0	1	1	Shunt and Bus, Triggered
1	0	0	Power-Down (or Shutdown)
1	0	1	Shunt Voltage, Continuous
1	1 1 0		Bus Voltage, Continuous
1	1	1	Shunt and Bus, Continuous

(1) Shaded values are default.

7.1.2 Shunt Voltage Register (01h) (Read-Only)

The Shunt Voltage Register stores the current shunt voltage reading, V_{SHUNT} . Negative numbers are represented in two's complement format. Generate the two's complement of a negative number by complementing the absolute value binary number and adding 1. An MSB = '1' denotes a negative number.

Example: For a value of $V_{SHUNT} = -80 \text{ mV}$:

- 1. Take the absolute value: 80 mV
- 2. Translate this number to a whole decimal number (80 mV \div 2.5 μ V) = 32000
- 3. Convert this number to binary = 0111 1101 0000 0000
- 4. Complement the binary result = 1000 0010 1111 1111
- 5. Add '1' to the complement to create the two's complement result = 1000 0011 0000 0000 = 8300h

If averaging is enabled, this register displays the averaged value.

Full-scale range = 81.92 mV (decimal = 7FFF); LSB: 2.5 μ V.

表 7-7. Shunt Voltage Register (01h) (Read-Only) Description

			• •					•	, ,		• ,					
BIT#	D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
BIT NAME	SIGN	SD14	SD13	SD12	SD11	SD10	SD9	SD8	SD7	SD6	SD5	SD4	SD3	SD2	SD1	SD0
POR VALUE	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

7.1.3 Bus Voltage Register (02h) (Read-Only) (1)

The Bus Voltage Register stores the most recent bus voltage reading, VBUS.

If averaging is enabled, this register displays the averaged value.

Full-scale range = 40.96 V (decimal = 7FFF); LSB = 1.25 mV.

表 7-8. Bus Voltage Register (02h) (Read-Only) Description

				•			- 5	- 1	, t		, ,					
BIT#	D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
BIT NAME	_	BD14	BD13	BD12	BD11	BD10	BD9	BD8	BD7	BD6	BD5	BD4	BD3	BD2	BD1	BD0

Copyright © 2024 Texas Instruments Incorporated Product Folder Links: *INA226-Q1*

www.ti.com.cn

表 7-8. Bus Voltage Register (02h) (Read-Only) Description (续)

BIT#	D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
POR VALUE	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

(1) D15 is always zero because bus voltage can only be positive.

25

Product Folder Links: INA226-Q1 English Data Sheet: SBOS743

7.1.4 Power Register (03h) (Read-Only)

If averaging is enabled, this register displays the averaged value.

The Power Register LSB is internally programmed to equal 25 times the programmed value of the Current_LSB.

The Power Register records power in Watts by multiplying the decimal values of the Current Register with the decimal value of the Bus Voltage Register according to 方程式 4.

表 7-9. Power Register (03h) (Read-Only) Description

BIT#	D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
BIT NAME	PD15	PD14	PD13	PD12	PD11	PD10	PD9	PD8	PD7	PD6	PD5	PD4	PD3	PD2	PD1	PD0
POR VALUE	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

7.1.5 Current Register (04h) (Read-Only)

If averaging is enabled, this register displays the averaged value.

The value of the Current Register is calculated by multiplying the decimal value in the Shunt Voltage Register with the decimal value of the Calibration Register, according to 方程式 3.

表 7-10. Current Register (04h) (Read-Only) Register Description

BIT#	D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
BIT NAME	CSIGN	CD14	CD13	CD12	CD11	CD10	CD9	CD8	CD7	CD6	CD5	CD4	CD3	CD2	CD1	CD0
POR VALUE	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

7.1.6 Calibration Register (05h) (Read/Write)

This register provides the device with the value of the shunt resistor that is present to create the measured differential voltage. The register also sets the resolution of the Current Register. Programming this register sets the Current_LSB and the Power_LSB. This register is also used in overall system calibration. See the *Programming the Calibration Register* for additional information on programming the Calibration Register.

表 7-11. Calibration Register (05h) (Read/Write) Description

							_	•	, ,		,					
BIT#	D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
BIT NAME	_	FS14	FS13	FS12	FS11	FS10	FS9	FS8	FS7	FS6	FS5	FS4	FS3	FS2	FS1	FS0
POR VALUE	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

7.1.7 Mask/Enable Register (06h) (Read/Write)

The Mask/Enable Register selects the function that is enabled to control the Alert pin as well as how that pin functions. If multiple functions are enabled, the highest significant bit position Alert Function (D15-D11) takes priority and responds to the Alert Limit Register.

表 7-12. Mask/Enable Register (06h) (Read/Write)

BIT#	D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
BIT NAME	SOL	SUL	BOL	BUL	POL	CNVR	_	_	_	_	_	AFF	CVRF	OVF	APOL	LEN
POR VALUE	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

SOL: Shunt Voltage Over-Voltage

Bit 15 Setting this bit high configures the Alert pin to be asserted if the shunt voltage measurement following a conversion

Product Folder Links: INA226-Q1

exceeds the value programmed in the Alert Limit Register.

SUL: Shunt Voltage Under-Voltage

www.ti.com.cn

Bit 14 Setting this bit high configures the Alert pin to be asserted if the shunt voltage measurement following a conversion

drops below the value programmed in the Alert Limit Register.

BOL: Bus Voltage Over-Voltage

Bit 13 Setting this bit high configures the Alert pin to be asserted if the bus voltage measurement following a conversion

exceeds the value programmed in the Alert Limit Register.

BUL: Bus Voltage Under-Voltage

Bit 12 Setting this bit high configures the Alert pin to be asserted if the bus voltage measurement following a conversion

drops below the value programmed in the Alert Limit Register.

POL: Power Over-Limit

Bit 11 Setting this bit high configures the Alert pin to be asserted if the Power calculation made following a bus voltage

measurement exceeds the value programmed in the Alert Limit Register.

CNVR: Conversion Ready

Bit 10 Setting this bit high configures the Alert pin to be asserted when the Conversion Ready Flag, Bit 3, is asserted

indicating that the device is ready for the next conversion.

AFF: Alert Function Flag

Bit 4 While only one Alert Function can be monitored at the Alert pin at a time, the Conversion Ready can also be

enabled to assert the Alert pin. Reading the Alert Function Flag following an alert allows the user to determine if the

Alert Function is the source of the Alert.

When the Alert Latch Enable bit is set to Latch mode, the Alert Function Flag bit clears only when the Mask/Enable Register is read. When the Alert Latch Enable bit is set to Transparent mode, the Alert Function Flag bit is cleared

following the next conversion that does not result in an Alert condition.

CVRF: Conversion Ready Flag

Bit 3 Although the device can be read at any time, and the data from the last conversion is available, the Conversion

Ready Flag bit is provided to help coordinate one-shot or triggered conversions. The Conversion Ready Flag bit is set after all conversions, averaging, and multiplications are complete. Conversion Ready Flag bit clears under the

following conditions:

1.) Writing to the Configuration Register (except for Power-Down selection)

2.) Reading the Mask/Enable Register

OVF: Math Overflow Flag

Bit 2 This bit is set to '1' if an arithmetic operation resulted in an overflow error. The bit indicates that current and power

data can be invalid.

APOL: Alert Polarity bit; sets the Alert pin polarity.

Bit 1 1 = Inverted (active-high open collector)

0 = Normal (active-low open collector) (default)

LEN: Alert Latch Enable; configures the latching feature of the Alert pin and Alert Flag bits.

Bit 0 1 = Latch enabled

0 = Transparent (default)

When the Alert Latch Enable bit is set to Transparent mode, the Alert pin and Flag bit resets to the idle states when the fault has been cleared. When the Alert Latch Enable bit is set to Latch mode, the Alert pin and Alert Flag bit

remains active following a fault until the Mask/Enable Register has been read.

Product Folder Links: INA226-Q1

7.1.8 Alert Limit Register (07h) (Read/Write)

The Alert Limit Register contains the value used to compare to the register selected in the Mask/Enable Register to determine if a limit has been exceeded.

表 7-13. Alert Limit Register (07h) (Read/Write) Description

BIT#	D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
BIT NAME	AUL15	AUL14	AUL13	AUL12	AUL11	AUL10	AUL9	AUL8	AUL7	AUL6	AUL5	AUL4	AUL3	AUL2	AUL1	AUL0
POR VALUE	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

7.1.9 Manufacturer ID Register (FEh) (Read-Only)

The Manufacturer ID Register stores a unique identification number for the manufacturer.

表 7-14. Manufacturer ID Register (FEh) (Read-Only) Description

							_	•	, ,		,					
BIT#	D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
BIT NAME	ID15	ID14	ID13	ID12	ID11	ID10	ID9	ID8	ID7	ID6	ID5	ID4	ID3	ID2	ID1	ID0
POR VALUE	0	1	0	1	0	1	0	0	0	1	0	0	1	0	0	1

ID: Manufacturer ID Bits

Bits 0-15 Stores the manufacturer identification bits

7.1.10 Die ID Register (FFh) (Read-Only)

The Die ID Register stores a unique identification number and the revision ID for the die.

表 7-15. Die ID Register (FFh) (Read-Only) Description

					–		9.0.0.	(, '	(···,		P				
BIT#	D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
BIT NAME	DID11	DID10	DID9	DID8	DID7	DID6	DID5	DID4	DID3	DID2	DID1	DID0	RID3	RID2	RID1	RID0
POR VALUE	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Product Folder Links: INA226-Q1

DID: Device ID Bits

Bits 4-15 Stores the device identification bits

RID: Die Revision ID Bits

Bit 0-3 Stores the device revision identification bits

8 Application and Implementation

备注

以下应用部分中的信息不属于 TI 器件规格的范围, TI 不担保其准确性和完整性。TI 的客 户应负责确定 器件是否适用于其应用。客户应验证并测试其设计,以确保系统功能。

8.1 Application Information

The INA226-Q1 is a current shunt and power monitor with an I2C™ compatible interface. The device monitors both a shunt voltage drop and bus supply voltage. Programmable calibration value, conversion times, and averaging, combined with an internal multiplier, enable direct readouts of current in amperes and power in watts.

8.2 Typical Applications

8.2.1 High-Side Sensing Circuit Application

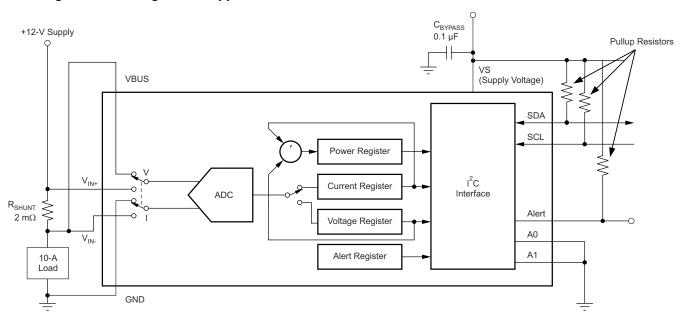


图 8-1. Typical Circuit Configuration, INA226-Q1

8.2.1.1 Design Requirements

INA226-Q1 measures the voltage developed across a current-sensing resistor (R_{SHUNT}) when current passes through the resistor. The device also measures the bus supply voltage and can calculate power when calibrated. The device comes with alert capability where the alert pin can be programmed to respond to a user-defined event or to a conversion ready notification. This design illustrates the ability of the alert pin to respond to a set threshold.

Product Folder Links: INA226-Q1

Copyright © 2024 Texas Instruments Incorporated

29

提交文档反馈

8.2.1.2 Detailed Design Procedure

The Alert pin can be configured to respond to one of the five alert functions described in the *Alert Pin* section. The alert pin must to be pulled up to the V_{VS} pin voltage via the pull-up resistors. The configuration register is set based on the required conversion time and averaging. The Mask/Enable Register is set to identify the required alert function and the Alert Limit Register is set to the limit value used for comparison.

8.2.1.3 Application Curves

 \boxtimes 8-2 shows the Alert pin response to a shunt voltage over-limit of 80 mV for a conversion time (t_{CT}) of 1.1 ms and averaging set to 1. \boxtimes 8-3 shows the response for the same limit but with the conversion time reduced to 140 μ s.

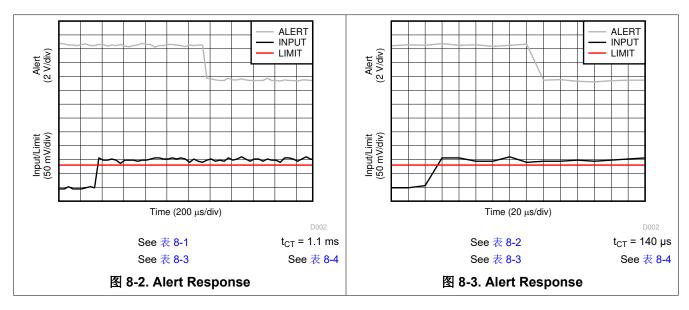


表 8-1. Configuration Register (00h) Settings for 图 8-2 (Value = 4025h)

BIT#	D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
BIT NAME	RST	_	_	_	AVG2	AVG1	AVG0	VBUSCT 2	VBUSCT 1	VBUSCT 0	V _{SH} CT2	V _{SH} CT1	V _{SH} CT0	MODE3	MODE2	MODE1
POR VALUE	0	1	0	0	0	0	0	0	0	0	1	0	0	1	0	1

表 8-2. Configuration Register (00h) Settings for 图 8-3 (Value = 4005h)

BIT#	D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
BIT NAME	RST	_	_	_	AVG2	AVG1	AVG0	VBUSCT 2	VBUSCT 1	VBUSCT 0	V _{SH} CT2	V _{SH} CT1	V _{SH} CT0	MODE3	MODE2	MODE1
POR VALUE	0	1	0	0	0	0	0	0	0	0	0	0	0	1	0	1

表 8-3. Mask/Enable Register (06h) Settings for 图 8-2 and 图 8-3 (Value = 8000h)

BIT#	D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
BIT NAME	SOL	SUL	BOL	BUL	POL	CNVR	_	_	_	_	_	AFF	CVRF	OVF	APOL	LEN
POR VALUE	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

表 8-4. Alert Limit Register (07h) Settings for 图 8-2 and 图 8-3 (Value = 7D00)

BIT#	D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
BIT NAME	AUL15	AUL14	AUL13	AUL12	AUL11	AUL10	AUL9	AUL8	AUL7	AUL6	AUL5	AUL4	AUL3	AUL2	AUL1	AUL0
POR VALUE	0	1	1	1	1	1	0	1	0	0	0	0	0	0	0	0

Copyright © 2024 Texas Instruments Incorporated Product Folder Links: *INA226-Q1*

8.3 Power Supply Recommendations

The input circuitry of the device can accurately measure signals on common-mode voltages beyond the power supply voltage, V_{VS} . For example, the voltage applied to the V_{VS} power supply terminal can be 5 V, whereas the load power-supply voltage being monitored (the common-mode voltage) can be as high as 36 V. Note also that the device can withstand the full 0-V to 36-V range at the input terminals, regardless of whether the device has power applied or not.


Place the required power-supply bypass capacitors as close as possible to the supply and ground terminals of the device to provide stability. A typical value for this supply bypass capacitor is 0.1 μ F. Applications with noisy or high-impedance power supplies can require additional decoupling capacitors to reject power-supply noise.

8.4 Layout

8.4.1 Layout Guidelines

Connect the input pins (IN+ and IN-) to the sensing resistor using a Kelvin connection or a 4-wire connection. These connection techniques verify that only the current-sensing resistor impedance is detected between the input pins. Poor routing of the current-sensing resistor commonly results in additional resistance present between the input pins. Given the very low ohmic value of the current-sensing resistor, any additional high-current carrying impedance causes significant measurement errors. Place the power-supply bypass capacitor as close as possible to the supply and ground pins.

8.4.2 Layout Example

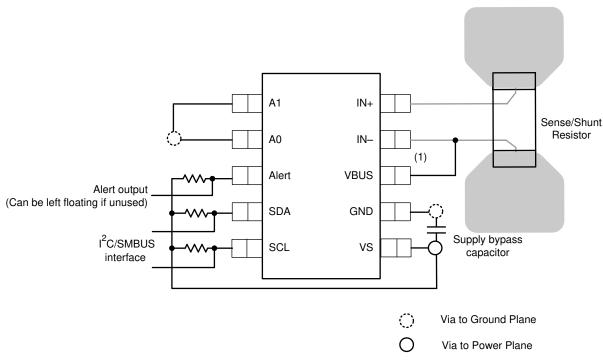

(1) connect the VBUS pin to the power supply rail.

图 8-4. INA226-Q1 Layout Example

提交文档反馈

31



9 Device and Documentation Support

9.1 Device Support

9.1.1 Development Support

INA226EVM Evaluation Board and Software Tutorial (SBOU113)

9.2 接收文档更新通知

要接收文档更新通知,请导航至 ti.com 上的器件产品文件夹。点击*通知* 进行注册,即可每周接收产品信息更改摘要。有关更改的详细信息,请查看任何已修订文档中包含的修订历史记录。

9.3 支持资源

TI E2E™中文支持论坛是工程师的重要参考资料,可直接从专家处获得快速、经过验证的解答和设计帮助。搜索现有解答或提出自己的问题,获得所需的快速设计帮助。

链接的内容由各个贡献者"按原样"提供。这些内容并不构成 TI 技术规范,并且不一定反映 TI 的观点;请参阅 TI 的使用条款。

9.4 Trademarks

I2C[™] is a trademark of I2C Technologies, Ltd.

TI E2E™ is a trademark of Texas Instruments.

所有商标均为其各自所有者的财产。

9.5 静电放电警告



静电放电 (ESD) 会损坏这个集成电路。德州仪器 (TI) 建议通过适当的预防措施处理所有集成电路。如果不遵守正确的处理和安装程序,可能会损坏集成电路。

ESD 的损坏小至导致微小的性能降级,大至整个器件故障。精密的集成电路可能更容易受到损坏,这是因为非常细微的参数更改都可能会导致器件与其发布的规格不相符。

9.6 术语表

TI 术语表

本术语表列出并解释了术语、首字母缩略词和定义。

10 Revision History

注:以前版本的页码可能与当前版本的页码不同

CI	nanges from Revision A (May 2020) to Revision B (September 2024)	Page
•	更新了整个文档中的表格、图和交叉参考的编号格式	1
•	更新了整个文档中的表格、图和交叉参考的编号格式	1
•	Updated thermal metric values to match thermal model	4
•	Added ± in front of typical values for PSRR specifications	<mark>5</mark>
•	Decreased input bias current typical value	<mark>5</mark>
•	Updated Shunt Input Gain Error vs Common-Mode Voltage graph and Input Bias current curves	7
CI	nanges from Revision * (July 2015) to Revision A (May 2020)	Page
•	添加了"提供功能安全"信息	1
•	Changed Alert Response curves in the Typical Applications section to accurately reflect device behav	ior <mark>30</mark>

Product Folder Links: INA226-Q1

Copyright © 2024 Texas Instruments Incorporated



11 Mechanical, Packaging, and Orderable Information

The following pages include mechanical, packaging, and orderable information. This information is the most current data available for the designated devices. This data is subject to change without notice and revision of this document. For browser-based versions of this data sheet, refer to the left-hand navigation.

Product Folder Links: INA226-Q1

Copyright © 2024 Texas Instruments Incorporated

提交文档反馈

33

www.ti.com 17-Jun-2024

PACKAGING INFORMATION

Orderable Device	Status	Package Type	Package Drawing	Pins	Package Qty	Eco Plan	Lead finish/ Ball material	MSL Peak Temp	Op Temp (°C)	Device Marking (4/5)	Samples
INA226AQDGSRQ1	ACTIVE	VSSOP	DGS	10	2500	RoHS & Green	NIPDAUAG	Level-2-250C-1 YEAR	-40 to 125	226Q	Samples

(1) The marketing status values are defined as follows:

ACTIVE: Product device recommended for new designs.

LIFEBUY: TI has announced that the device will be discontinued, and a lifetime-buy period is in effect.

NRND: Not recommended for new designs. Device is in production to support existing customers, but TI does not recommend using this part in a new design.

PREVIEW: Device has been announced but is not in production. Samples may or may not be available.

OBSOLETE: TI has discontinued the production of the device.

(2) RoHS: TI defines "RoHS" to mean semiconductor products that are compliant with the current EU RoHS requirements for all 10 RoHS substances, including the requirement that RoHS substance do not exceed 0.1% by weight in homogeneous materials. Where designed to be soldered at high temperatures, "RoHS" products are suitable for use in specified lead-free processes. TI may reference these types of products as "Pb-Free".

RoHS Exempt: TI defines "RoHS Exempt" to mean products that contain lead but are compliant with EU RoHS pursuant to a specific EU RoHS exemption.

Green: TI defines "Green" to mean the content of Chlorine (CI) and Bromine (Br) based flame retardants meet JS709B low halogen requirements of <=1000ppm threshold. Antimony trioxide based flame retardants must also meet the <=1000ppm threshold requirement.

- (3) MSL, Peak Temp. The Moisture Sensitivity Level rating according to the JEDEC industry standard classifications, and peak solder temperature.
- (4) There may be additional marking, which relates to the logo, the lot trace code information, or the environmental category on the device.
- (5) Multiple Device Markings will be inside parentheses. Only one Device Marking contained in parentheses and separated by a "~" will appear on a device. If a line is indented then it is a continuation of the previous line and the two combined represent the entire Device Marking for that device.
- (6) Lead finish/Ball material Orderable Devices may have multiple material finish options. Finish options are separated by a vertical ruled line. Lead finish/Ball material values may wrap to two lines if the finish value exceeds the maximum column width.

Important Information and Disclaimer: The information provided on this page represents TI's knowledge and belief as of the date that it is provided. TI bases its knowledge and belief on information provided by third parties, and makes no representation or warranty as to the accuracy of such information. Efforts are underway to better integrate information from third parties. TI has taken and continues to take reasonable steps to provide representative and accurate information but may not have conducted destructive testing or chemical analysis on incoming materials and chemicals. TI and TI suppliers consider certain information to be proprietary, and thus CAS numbers and other limited information may not be available for release.

In no event shall TI's liability arising out of such information exceed the total purchase price of the TI part(s) at issue in this document sold by TI to Customer on an annual basis.

OTHER QUALIFIED VERSIONS OF INA226-Q1:

PACKAGE OPTION ADDENDUM

www.ti.com 17-Jun-2024

NOTE: Qualified Version Definitions:

• Catalog - TI's standard catalog product

PACKAGE MATERIALS INFORMATION

www.ti.com 17-Jun-2024

TAPE AND REEL INFORMATION





A0	Dimension designed to accommodate the component width
В0	Dimension designed to accommodate the component length
K0	Dimension designed to accommodate the component thickness
W	Overall width of the carrier tape
P1	Pitch between successive cavity centers

QUADRANT ASSIGNMENTS FOR PIN 1 ORIENTATION IN TAPE



*All dimensions are nominal

Device	Package Type	Package Drawing		SPQ	Reel Diameter (mm)	Reel Width W1 (mm)	A0 (mm)	B0 (mm)	K0 (mm)	P1 (mm)	W (mm)	Pin1 Quadrant
INA226AQDGSRQ1	VSSOP	DGS	10	2500	330.0	12.4	5.3	3.4	1.4	8.0	12.0	Q1

PACKAGE MATERIALS INFORMATION

www.ti.com 17-Jun-2024



*All dimensions are nominal

	Device	Package Type	Package Drawing	Pins	SPQ	Length (mm)	Width (mm)	Height (mm)
I	INA226AQDGSRQ1	VSSOP	DGS	10	2500	366.0	364.0	50.0



SMALL OUTLINE PACKAGE



NOTES:

- 1. All linear dimensions are in millimeters. Any dimensions in parenthesis are for reference only. Dimensioning and tolerancing per ASME Y14.5M.

 2. This drawing is subject to change without notice.

 3. This dimension does not include mold flash, protrusions, or gate burrs. Mold flash, protrusions, or gate burrs shall not
- exceed 0.15 mm per side.
- 4. This dimension does not include interlead flash. Interlead flash shall not exceed 0.25 mm per side.
- 5. Reference JEDEC registration MO-187, variation BA.



SMALL OUTLINE PACKAGE



NOTES: (continued)

6. Publication IPC-7351 may have alternate designs.

7. Solder mask tolerances between and around signal pads can vary based on board fabrication site.



SMALL OUTLINE PACKAGE



NOTES: (continued)

- 8. Laser cutting apertures with trapezoidal walls and rounded corners may offer better paste release. IPC-7525 may have alternate design recommendations.
- 9. Board assembly site may have different recommendations for stencil design.



重要声明和免责声明

TI"按原样"提供技术和可靠性数据(包括数据表)、设计资源(包括参考设计)、应用或其他设计建议、网络工具、安全信息和其他资源,不保证没有瑕疵且不做出任何明示或暗示的担保,包括但不限于对适销性、某特定用途方面的适用性或不侵犯任何第三方知识产权的暗示担保。

这些资源可供使用 TI 产品进行设计的熟练开发人员使用。您将自行承担以下全部责任:(1) 针对您的应用选择合适的 TI 产品,(2) 设计、验证并测试您的应用,(3) 确保您的应用满足相应标准以及任何其他功能安全、信息安全、监管或其他要求。

这些资源如有变更,恕不另行通知。TI 授权您仅可将这些资源用于研发本资源所述的 TI 产品的应用。严禁对这些资源进行其他复制或展示。您无权使用任何其他 TI 知识产权或任何第三方知识产权。您应全额赔偿因在这些资源的使用中对 TI 及其代表造成的任何索赔、损害、成本、损失和债务,TI 对此概不负责。

TI 提供的产品受 TI 的销售条款或 ti.com 上其他适用条款/TI 产品随附的其他适用条款的约束。TI 提供这些资源并不会扩展或以其他方式更改 TI 针对 TI 产品发布的适用的担保或担保免责声明。

TI 反对并拒绝您可能提出的任何其他或不同的条款。

邮寄地址: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2024,德州仪器 (TI) 公司