

Voltage Reference Selection and Design Tips For Data Converters



Rai Trailokya, Marcoo Zamora

ABSTRACT

When designing a data converter system it is important to choose the correct voltage reference for the application. Every data converter, such as an Analog-to-digital converter (ADC) or Digital-to-analog converter (DAC), requires a voltage reference (VREF) that is either integrated into the data converter or supplied from an external source. Just like the resolution of an ADC, voltage references have critical performance attributes that separate voltage references into tiers of accuracy. Due to this it is necessary to be able to choose the correct voltage reference to achieve the highest resolution given the system considerations.

Table of Contents

1 Introduction.....	2
2 Analog-to-Digital Converter Error.....	2
3 Voltage Reference DC Error.....	2
4 DC Error Calculations.....	4
5 Calibration.....	6
6 Voltage Reference Noise Error.....	7
7 Dynamic Error (Voltage Reference Driving Capability).....	10
8 Low Power Applications.....	12
9 References.....	12
10 Revision History.....	13

List of Figures

Figure 4-1. ADC Input to Output With Gain Error.....	4
Figure 4-2. ADC Gain Error.....	5
Figure 5-1. Temperature Drift Error With Calibration Profiles.....	7
Figure 6-1. LM4050 Noise Voltage Versus Frequency.....	9
Figure 6-2. REF3425 0.1Hz to 10Hz Noise.....	9
Figure 6-3. REF3425 Noise Performance 10Hz to 100kHz.....	9
Figure 7-1. SAR ADC Sampling Architecture.....	10
Figure 7-2. SAR ADC VREF Current Consumption.....	11
Figure 8-1. Typical Power Budget of a Field Transmitter.....	12

List of Tables

Table 2-1. Example Voltage Reference Recommendation to Data Converters.....	2
Table 3-1. Initial Accuracy.....	3
Table 3-2. Temperature Coefficient Into Percent Error.....	3
Table 4-1. REF3425 Example.....	6
Table 5-1. Voltage Reference Calibration Methods.....	6

Trademarks

All trademarks are the property of their respective owners.

1 Introduction

Voltage references (VREF) are beneficial and often necessary for high-accuracy signal chain applications. This is because a standard signal chain contains a data converter, such as the Analog-to-digital converter (ADC) or Digital-to-analog converter (DAC), which measures or creates a precise signal. In the signal chain, the voltage reference output is typically the most precise voltage available to a data converter because many signal chain applications are sensitive to variations in gain error or noise error. Designers must consider how an error can impact the system. Understanding the various voltage reference errors of voltage reference errors is important for recognizing the benefits and limitations of integrated voltage references versus external voltage references.

2 Analog-to-Digital Converter Error

Understanding voltage reference specifications is necessary to evaluate the right voltage reference for the signal chain application. The main errors affecting the signal chain elements such as an ADC are gain error, noise error, and dynamic error. In ADCs, the gain error is a static error that effects every sample in a continuous sampling period of an ADC and can be reduced or eliminated with calibration. Noise error is an error that affect every sample independently and randomly and is inherent to semiconductor devices and architectures. Examples of noise error are 1/f noise and broadband noise. In ADCs, the noise affects all the measurements and cannot be eliminated but can be attenuated through filtering or by using digital processing techniques. Dynamic error is an error that is caused by fast switching voltage rails or change in load current. This is often associated with the input rails of the ADC but dynamic error also applies to any fast switching on output of the voltage reference. Dynamic error in this document is focused around droop error which is related to the data converter architecture and voltage reference output stage. Gain, noise, and dynamic errors are affected by the voltage reference performance. [Table 2-1](#) covers general guidelines on voltage reference to ADC/DAC pairings but there is still flexibility based on system requirements. The background behind these choices is covered in this document.

Table 2-1. Example Voltage Reference Recommendation to Data Converters

ADC RESOLUTION	ADC RECOMMENDATION	DAC RESOLUTION	DAC RECOMMENDATION	VOLTAGE REFERENCE RECOMMENDATION
10-b	ADS7042	8-b	DAC43608	TL431LI , TLV431
12-b	ADS7138 , ADS7038	10-b	DAC53608	LM4040-N , LM4050-N , REF30
14-b to 16-b	ADS795X , ADS1118	12-b	DAC61402	REF31 , REF33 , REF4132 , REF35
16-b to 18-b	ADS7066 , ADS1120	14-b to 16-b	DAC8802 , DAC82002	REF34 , REF35 , REF50
18-b+	ADS8900B , ADS127L01	16-b+	DAC11001A , DAC11001B	REF70 , REF54
24-b	ADS131ML08			REF70 , REF54
32-b	ADS1285 , ADS1262			REF70 , REF54

3 Voltage Reference DC Error

DC error in a voltage references is a culmination of a variety of statics errors. One must understand how this error exists and the origin to better understand when the error impacts the measurements and system as a whole. DC error in a voltage reference affects the signal chain as a gain error in a data converter such as an ADC or as an offset for level shifting applications. The importance of gain error on ADC depends on the measurements that are being performed as there can be larger impact on DC or very low frequency measurements such as measuring voltage and current. This gain error is also evident in time-domain based measurements. [Table 2-1](#) shows example voltage reference recommendations based on ADC resolution based on voltage reference DC error to have a low gain error in the system. Refer to [Voltage Reference Selection Basics](#) for an understanding of key parameters regarding voltage references.

3.1 Initial Accuracy and Solder Shift

Initial accuracy of a system dictates how close a reference voltage is to the nominal voltage at 25C. This voltage deviation typically has a max deviation that is given in percent. Typical values of initial accuracy are 0.05% to 2% (500 – 20,000ppm). This wide range of initial accuracy values can be used to separate reference voltages into different tiers of accuracy such as in [Table 3-1](#). Initial accuracy is also only valid for the specified conditions on the electrical characteristics table.

Table 3-1. Initial Accuracy

ACCURACY	RANGE
High	< 0.1%
Medium	0.1% - 0.5%
Low	> 0.5%

One common misconception is that the reference voltage error measured on a soldered PCB board at 25C is just a component of initial accuracy. This statement is incorrect because every device that is soldered experiences an initial thermal shock that can affect the initial accuracy of the device. The deviation due to solder shift is not always reported on a data sheet but even if the solder shift is not reported, this is a physical phenomena that is always present. If a design requires a device to go through multiple solder reflows then the expected deviation is much larger. Separating solder shift and initial accuracy on a soldered device is very difficult. Note that the initial accuracy and solder shift do not include the effects of accuracy shifts from long term shift, thermal hysteresis, or thermal drift.

Initial accuracy and solder shift are gain errors that can both be calibrated and this is common in very high resolution systems but not so often in low resolution systems due to calibration cost. In low resolution systems, consider that the initial accuracy and solder shift can be the largest DC errors a voltage reference. If there is no calibration in the system then the initial accuracy is a dominant factor and is important to choose the device with the best accuracy to lower the total error. In higher resolution systems the initial accuracy and solder shift must be calibrated out as even a 0.1% difference in accuracy across devices can severely degrade the performance of 18-bit resolution systems. Therefore these gain errors are typically calibrated out by measuring the output voltage of the voltage reference at 25C to know the deviation. By knowing this value, the effect becomes negligible or non-existent as the value can be taken into account in the digital calculations.

3.2 Temperature Drift

Temperature Drift is the change in reference voltage over temperature. This specification is usually defined by the box method technique. More details on how the box method is calculated are in TI's [Voltage reference selection basics white paper](#). There are several considerations when choosing the correct temperature drift due to the non-linear nature. One consideration is that the drift is usually defined as an average and can be bigger or smaller in particular regions. The shape of the temperature drift curve varies in a linear or non-linear way based on the reference architecture and the curvature correction methods used. One common misconception is that the voltage reference core, buried zener or bandgap, dictates the final temperature drift curvature of the device. This is not the case because most voltage reference cores have surrounding circuitry for trimming and adjusting the temperature curvature which adjusts the original core temperature shape. [Table 3-2](#) shows the relationship between temperature drift and percent error to demonstrate how temperature drift can be compared to accuracy.

Table 3-2. Temperature Coefficient Into Percent Error

TEMP COEFFICIENT (ppm/°C)	ERROR FROM 0°C to 70°C (%)	ERROR FROM -40°C to 85°C (%)	ERROR FROM -40°C to 125°C (%)
1	0.0070	0.0125	0.0165
5	0.0350	0.0625	0.0825
10	0.0700	0.1250	0.1650
50	0.3500	0.6250	0.8250
100	0.7000	1.2500	1.6500

3.3 Line Regulation

Line regulation is defined as change in the output voltage of a reference with respect to change in the supply voltage in the specified region. Line regulation error directly gets translated into gain error. This is critical for battery operated systems where input varies as the battery power goes down. A LDO with good line regulation spec is used as the supply for the reference to improve the line regulation performance of the system. This also applies to systems where the VIN varies on the input of the voltage reference due to other loads on the same rail.

4 DC Error Calculations

To maintain that a system meets the gain error specifications, first characterize the gain error into a usable value. This is important because gain error affects the signal chain in a different way than dynamic error and noise error. For example, when a voltage reference supplies the reference for an ADC, the DC errors of the voltage reference combines with the gain error of the ADC. When measuring a signal, this means that the gain error scales proportionally to the ADC analog signal as shown in Figure 4-1. The gain error appears as an inaccuracy on the final ADC conversion but this can be minimized with calibration. The max gain error appears closer to the positive or negative full scale value of the ADC.

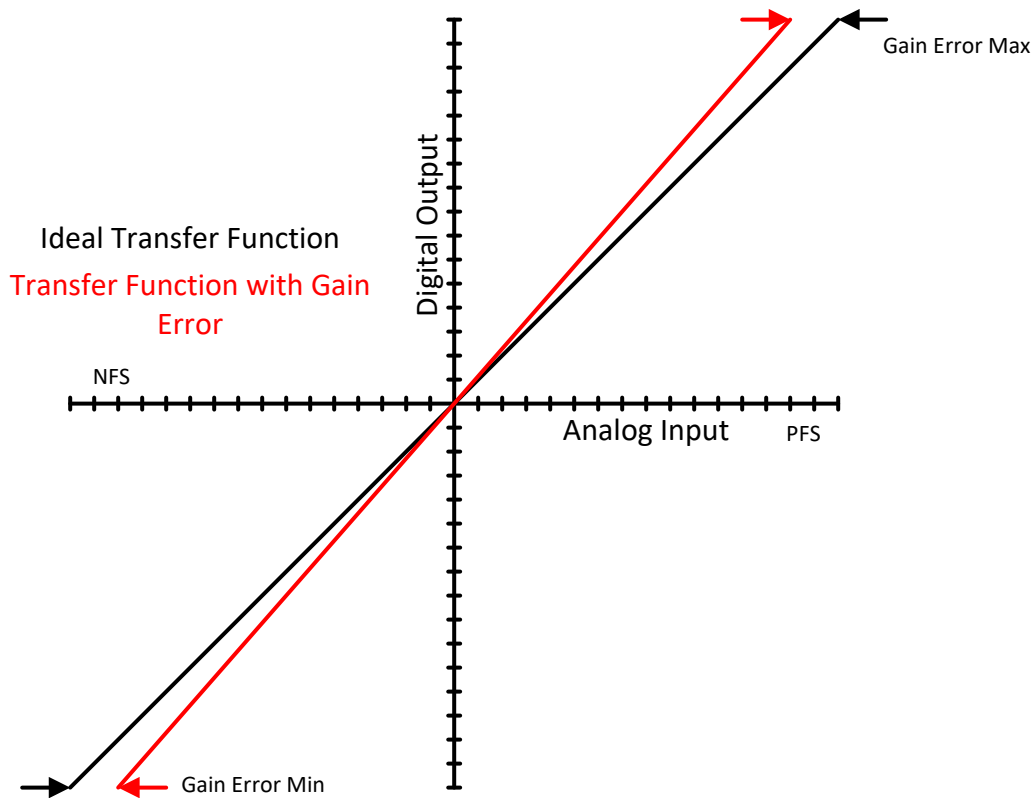


Figure 4-1. ADC Input to Output With Gain Error

An issue with characterizing the signal chain error with an integrated voltage reference is that typically internal voltage references are not fully characterized as in depth as external voltage references and often lack maximum worst case values. Due to this, calculating the worst case gain error of the system is difficult. This challenge can be resolved by using an external voltage reference. The main reason to know the extrema is because not every system has the same level of calibration. If a signal chain only has gain error calibration at 25C the gain error decreases at 25C. If the same system experiences any environmental variations then the gain error changes and is unaccounted which can take a sensitive system out of tolerance. There are many applications where the internal voltage reference is sufficient but in other applications does not exist internally.

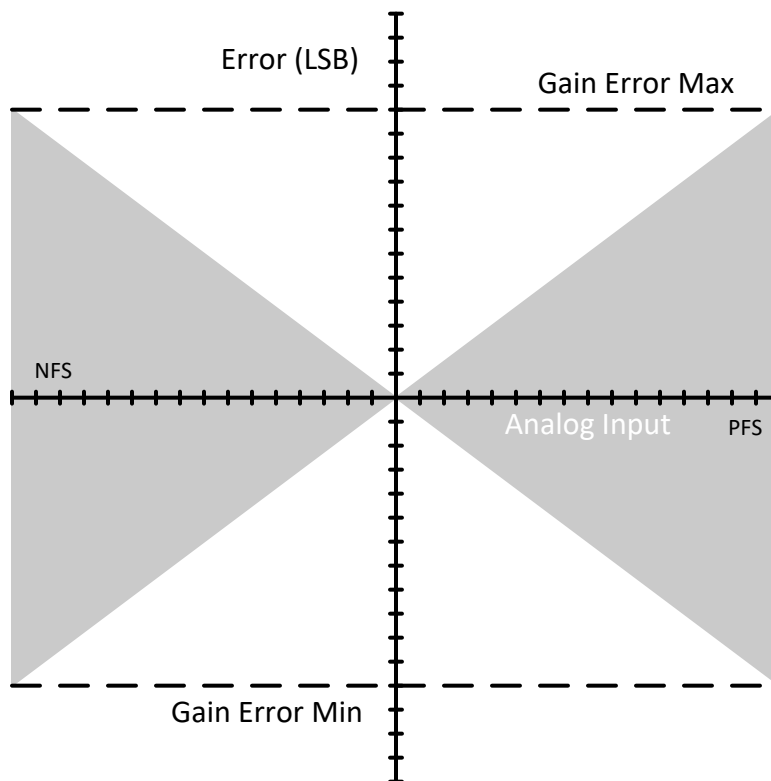


Figure 4-2. ADC Gain Error

There are two ways to calculate error in a system: worst-case and root sum squared (RSS). The main difference between the error calculations is how the individual errors of a system are combined. In worst case error all the errors are additive of the maximum extrema of each specification which results in an error value that encompasses every device variation. The worst case error is calculated as the additive value of all the errors as shown in Equation 1 and covers all the test conditions and limits. An alternative to the worst-case method is the RSS method that is based on statistical tolerance analysis as shown in Equation 2 that applies when all the terms are uncorrelated. In the real world, the error is between the worst-case and RSS method of results but closer to the RSS result.

$$\text{Worst Case Error}_{V_{REF}} = \text{Accuracy} + \text{TempCo} + \text{TempHyst} + \text{Long Term Drift} + 1/f \text{ Noise} + \dots \quad (1)$$

$$\text{RSS Error}_{V_{REF}} = \sqrt{(\text{Accuracy})^2 + (\text{TempCo})^2 + (\text{TempHyst})^2 + (\text{Long Term Drift})^2 + (1/f \text{ Noise})^2 + \dots} \quad (2)$$

The total gain error for a voltage reference is a culmination of all the errors such as initial accuracy, temperature coefficient, etc. To calculate the total error, all the errors must be in common units such as ppm (parts-per-million). The voltage reference total gain error can be further reduced with calibration, as calibration can eliminate the static errors such as initial accuracy and temperature drift as shown in Table 4-1. For the purposes of this example, errors such as solder shift, long term drift, load regulation, line regulation, and solder shift among others have been omitted but can be included to calculate a more accurate representation of the VREF total error. Other errors that were not mentioned can be found in Table 2-1. Table 4-1 shows how all the errors are combined using the RSS method.

Table 4-1. REF3425 Example

GAIN ERROR	GAIN ERROR VALUE	GAIN ERROR VALUE (ppm)
Initial Accuracy	0.05%	500
Temperature Drift (TempCo)	6ppm/°C	990 (40°C to 125°C)
Temperature Drift Post Calibration (80% Reduction)	1.2ppm/°C	198 (40°C to 125°C)
Thermal Hysteresis (TempHyst)	Cycle 1: 30ppm, Cycle 2: 10ppm	40
1/f noise	15uV _{P-P}	15
Worst Case Total	0.1545%	1545
RSS Total	0.111%	1110
RSS Total with 25C Calibration	0.0991%	991
RSS Total with 25C and TempCo Calibration	0.0202%	202

In [Table 4-1](#) You can see the comparison of total gain error under different conditions and the importance of calibration. By using [Equation 3](#) and a known ADC resolution, the LSBs that is affected by the gain error of the signal chain can be calculated.

$$\text{LSB} = \text{Gain Error}_{\text{ppm}} * 2^{N-\text{bits}} \quad (3)$$

5 Calibration

System calibration is often necessary in many signal chain applications to eliminate gain and offset errors. Calibration can remove the voltage reference DC error which reduces the gain error but the amount depends on the calibration method. We can separate calibration into two main calibration categories, single-point calibration and multi-point calibration and this can be seen in [Table 5-1](#).

Table 5-1. Voltage Reference Calibration Methods

	SINGLE POINT CALIBRATION	MULTIPOINT CALIBRATION
Initial Accuracy	X	X
Solder Shift	X	X
Thermal Hysteresis	X	X
Temperature Drift		X

Single-point calibration is calibration that is performed at one temperature point. This temperature point is usually either 25C or typical operating temperature of the system. The benefit of this type of calibration is that this calibration can remove voltage reference DC errors post calibration. This type of calibration can be done multiple ways: factory calibration, start-up calibration, run time calibration. Factory calibration is performed at the assembly and test site. In the assembly and test site, the data converter input or output can be compared to a very precise voltage standard. By using the difference between the values, the ADC or microcontroller can store the value internally and adjust the output based on the measured difference. The benefit of this calibration is that measurements can be performed to a high precision and the signal chain system won't need a built-in self test. The drawback is that the calibration cannot be performed at the site of operation, cannot take into account any drift due to aging, and cannot predict the temperature operating conditions of the system. Start-up calibration and run-time calibration are single point calibration tests that are beneficial because these tests can remove the voltage reference DC error at the site of operation. This means that any effect of temperature and aging in the system is taken into account but due to the lack of precise voltage standards, the precision of this calibration can possibly not match the precision of a factory calibration. The inclusion of a built in self test for start-up or run-time calibration possibly requires additional components which can increase the complexity of the system.

One of the main drawbacks to single-point calibration is that single-point calibration is only valid at a single temperature point and significant temperature variations cause DC errors in the voltage reference that increase the gain error of the data converter. Multi-point calibration is able to fix this draw back because calibration can be performed at multiple temperature points. In [Figure 5-1](#) we can see how much the temperature drift error

gets reduced by using a multi-point calibration and creating a temperature profile based on differences that can be used to adjust the final measurements. Typically the gain error correction multiplies to the end result of the data conversion. In this example a 3-point calibration decreased the temperature drift error by 3x and a 6 point decreased the error by over 10x. In this example, the final curvature of the 3-point and 6-point calibration lines were created by calculating the slope in between the measured points and then subtracting that result from the uncalibrated value. By knowing the error of the system, a designer can eliminate gain error digitally by multiplying the data converter result by the ratio of (uncalibrated VREF / calibrated VREF).

The temperature calibration is more effective in smaller temperature windows due to this designers must know the operating temperature the device experiences. In Figure 5-1 the uncalibrated waveform is a second order function but this can vary between devices. Getting a first order to higher order curvatures is possible. The temperature drift varies from device to device which can be difficult to calibrate out the error across multiple devices with the same profile so we recommend to calibrate each voltage reference with a unique profile. The drawback of multi-point calibration is the increase of cost, calibration time, and not all temperature curvatures are easy to calibrate. Choosing a more precise voltage reference which better temperature drift to avoid performing multi-point calibration can be attractive.

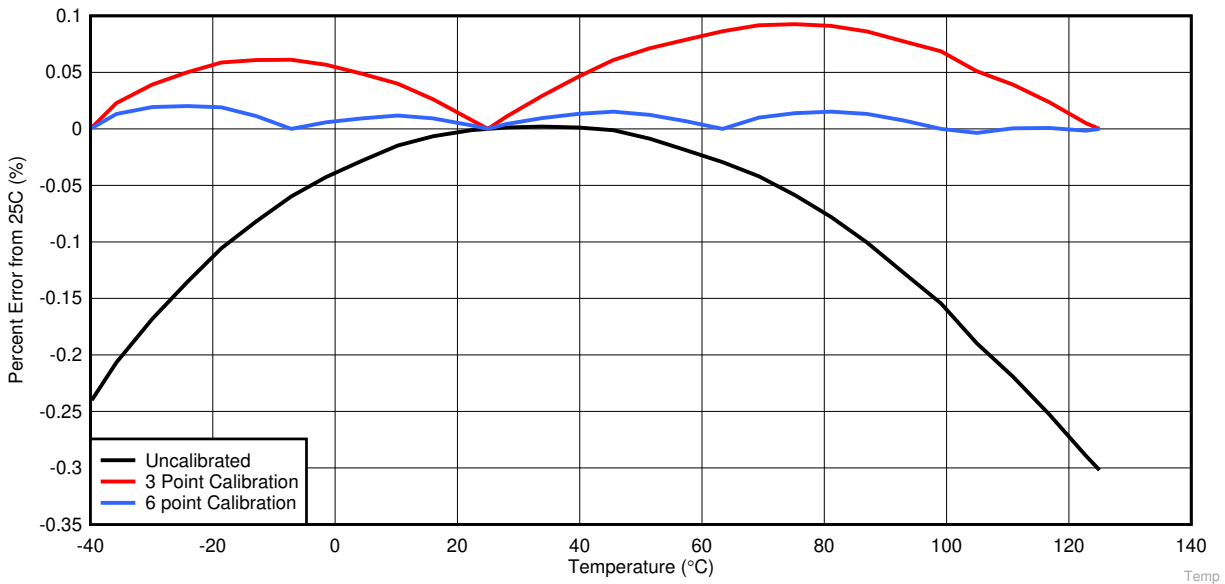


Figure 5-1. Temperature Drift Error With Calibration Profiles

In Table 3-2 the temperature drift error is converted into a percent error which is easily comparable to initial accuracy error. Keep in mind that this error is the maximum worst case deviation from 25C in an uncalibrated system. Most devices do not reach a deviation this high. Choosing the device with the lowest temperature drift specification is often more practical in low-resolution systems as temperature calibration can be time consuming and costly. High resolution systems get more complicated because the temperature drift needs to be minimized to maximize the ADC performance especially if the signal chain has signal conditioning components that have their own temperature drift.

6 Voltage Reference Noise Error

Noise error is important because noise error cannot be eliminated completely in any system with calibration and noise error can appear different on subsequent samples from a data converter. Achieving a consistent resolution in high precision data converter systems is difficult when there are large amounts of noise from the voltage reference. Noise can be divided into two categories: 1/f noise and broadband noise.

6.1 1/f Noise

1/f noise is a low frequency noise in the 0.1Hz to 10Hz range also known as flicker noise. This noise is troublesome due to how low the frequency range is and the noise is difficult to filter out due to a large sampling time requirement. When performing DC measurements, this noise has a greater impact than broadband noise because 1/f noise cannot be practically filtered out due to how low the frequency is. The only way to reduce the

1/f noise from a reference voltage is to go choose the lowest noise reference voltage and voltage option because noise scales with output voltage.

6.2 Broadband Noise

Broadband noise is a flat noise that spans the complete frequency range of the device also known as wideband noise. Unlike 1/f noise, broadband noise affects the whole frequency range relatively equally; filtering out as much noise as possible is practical with either a RC filter or with digital filtering techniques. All circuits have broadband noise and a bandwidth limitation that limits the effect of the broadband noise so the noise is not infinite. Broadband noise is specified as either output noise from 10Hz to 10kHz or as output voltage noise density. Conversion between output noise outside and output noise density can be found in the precision labs noise series. One problem that a designer can run into is that noise is inversely proportional to quiescent current; therefore, achieving low noise in a low power system is difficult.

6.3 Power Supply Rejection Ratio

Power supply rejection ratio (PSRR) is a translation factor of the input noise to the output. PSRR is defined for wide frequency range (10Hz to 10MHz). Most series voltage references have a strong PSRR due to their inherent architecture, and this makes them an excellent choice to handle noisy power lines especially with bypass and load capacitors. PSRR can be improved by making sure the input to the voltage reference is an LDO and not a switching device. PSRR is analogous to dynamic impedance in case of shunt references as shunt voltage references do not have a PSRR as high as series voltage references. A large supply decoupling capacitor helps to improve the PSRR performance in case of noisy supply which can help with the overall high frequency noise.

6.4 Noise Example

When looking at noise in a signal chain, first see how the noise affects the dynamic performance of an ADC because SNR is one of the most important values when looking at AC and high frequency measurements which are common across many applications. The most common equation for SNR is shown in [Equation 4](#) because this is the highest SNR level for a good N bit ADC.

$$\text{SNR}_{\text{ADC}} = 6.02 \times N + 1.76 \text{ dB} \quad (4)$$

To see the effect of the external voltage reference, look at the total noise at the ADC in [Equation 5](#). The Total ADC noise (rms) is the combination of the uncorrelated noises from the ADC and voltage reference. Because the noises are uncorrelated, if we want the voltage reference to have a minimal impact on the SNR the VREF noise must be at least 5 times smaller than the ADC noise as shown in [Equation 6](#).

$$\text{Total ADC Noise (rms)} = \frac{AV_{\text{REF}}}{2\sqrt{2}} \times 10^{\frac{\text{SNR}_{\text{ADC}}}{20}} \quad (5)$$

$$\text{Allowed VREF Noise (rms)} \leq \frac{\text{Total ADC Noise}}{5} \quad (6)$$

In a voltage reference data sheet, noise is represented as flicker noise and wideband noise.

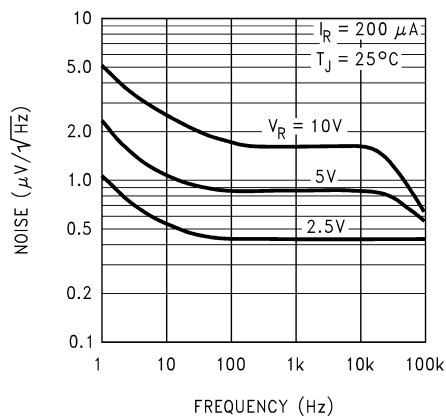


Figure 6-1. LM4050 Noise Voltage Versus Frequency

In Figure 6-1 the frequency domain plot is given from 1Hz to the complete frequency range. In this plot the noise level $k = 432\text{nV}/\sqrt{\text{Hz}}$ and a corner frequency $F_c = 65\text{Hz}$. Also the lower limit for flicker noise (FL) = 0.1Hz and the higher frequency limit (FH) is 10Hz. With this information the RMS flicker noise can be calculated as...

$$\frac{1}{f} \text{ Noise(rms)} = k * \sqrt{F_c} * \sqrt{\ln\left(\frac{F_H}{F_L}\right) + (F_H - F_L)} \tag{7}$$

An alternative view of flicker noise is presented in Figure 6-2 and wideband noise is shown in Figure 6-3.

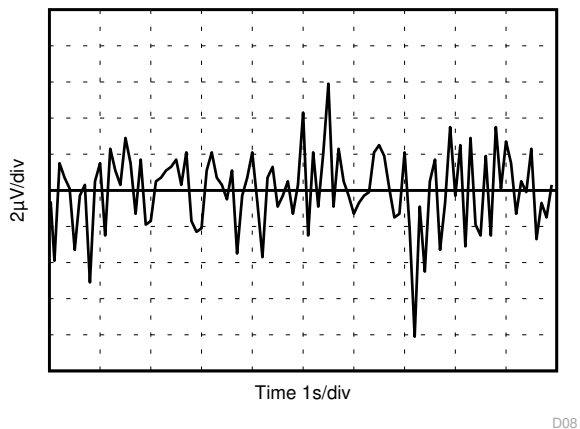


Figure 6-2. REF3425 0.1Hz to 10Hz Noise

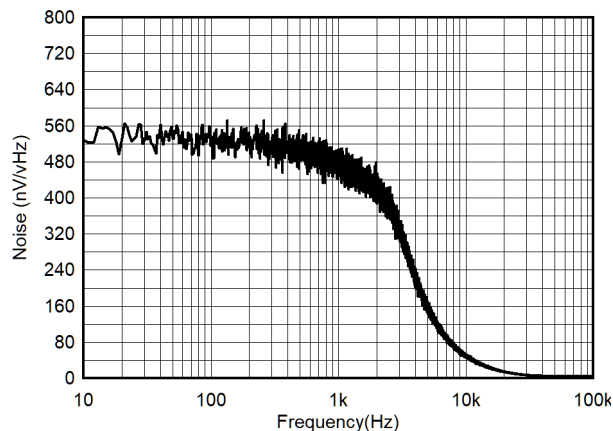


Figure 6-3. REF3425 Noise Performance 10Hz to 100kHz

In this case flicker noise is calculated in [Equation 8](#).

$$\frac{1}{f} \text{ Noise(rms)} = \frac{V_{P-P}}{6.6} \quad (8)$$

Flicker noise can't be filtered out. Hence allowed wideband noise is calculated based on the ADC SNR requirement. [Equation 9](#) shows how to find the wideband noise limit because the flicker noise cannot be filtered out.

$$\text{Wideband VREFNoise(Nw)} = \sqrt{\left(\frac{1}{f} \text{ VREFNoise}\right)^2 - (\text{Allowed VREFNoise})^2} \quad (9)$$

If allowed wide band noise is more than total wide band noise of the reference than we need to filter out the extra wide band noise component. [Equation 10](#) shows how to calculate the cut off frequency.

$$\text{Allowed Frequency} = \left(\frac{\text{Widebandnoise(rms)}}{\text{Nw}}\right)^2 \quad (10)$$

7 Dynamic Error (Voltage Reference Driving Capability)

SAR ADC logic first samples input before starting digital conversion. After that, SAR ADC samples VREF at appropriate cap for every bit conversion. Hence a charge re-distribution takes place on every bit conversion on reference pin of the ADC. The magnitude of peak current is proportional to the clock frequency of the data converter. MSB conversion requires maximum charge at the cap and LSB requires minimum charge. Hence current varies from MSB to LSB conversion. This current variation changes the output according to the output impedance. This variation gets translated into non-linear error.

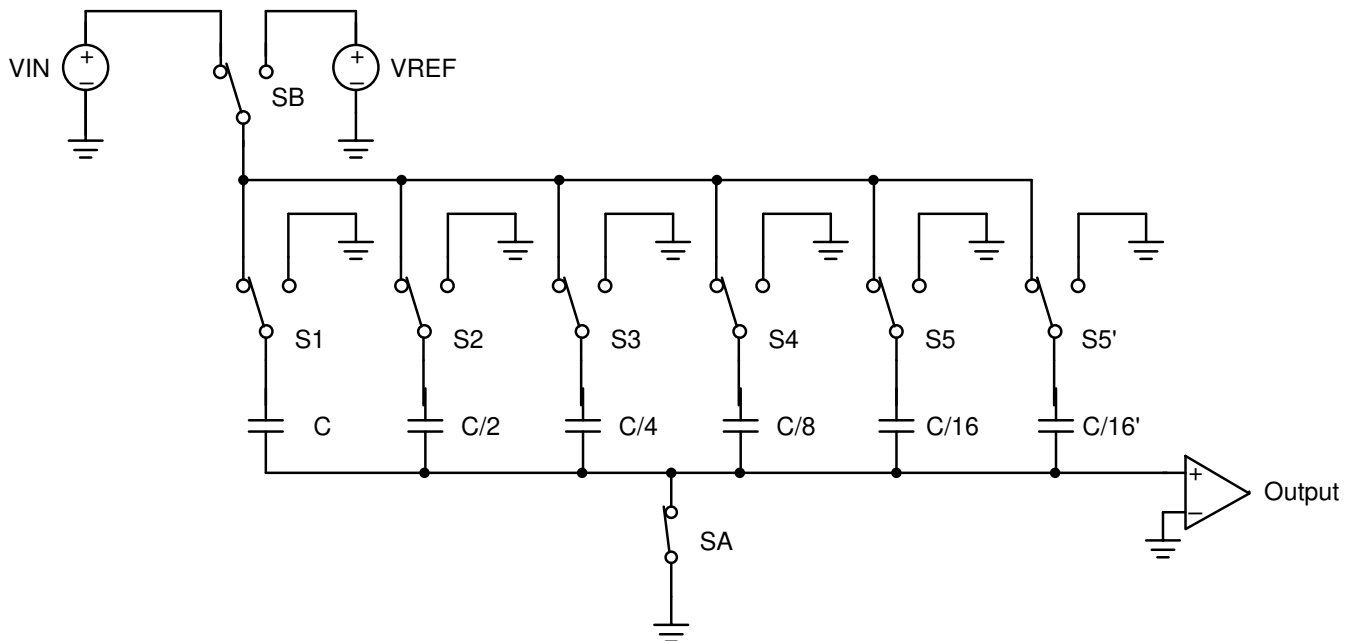


Figure 7-1. SAR ADC Sampling Architecture

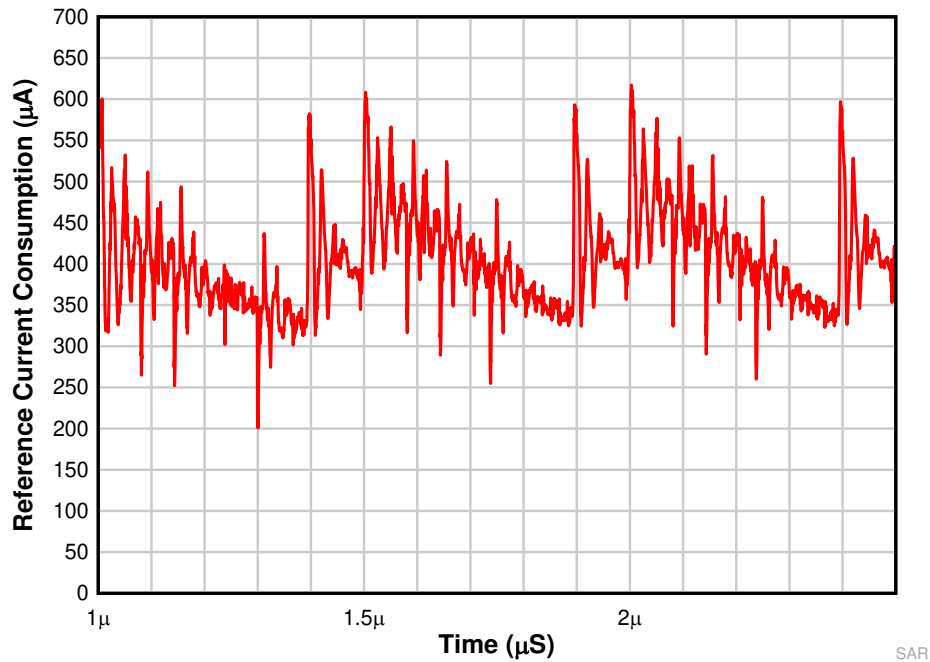


Figure 7-2. SAR ADC VREF Current Consumption

Figure 7-2 shows plot for transient current at 12 bit TI SAR AD7049 at AVDD (Reference pin) for 1V input when REF3433-Q1 is used as reference and sampling (CS) frequency is 2MHz and 64MHz Clock frequency. The load cap at reference pin is 10µF. The current is measured by measuring drop across 500Ω placed between reference pin of ADC and REF3433Q.

Time period for each conversion is 0.5µs. The data conversion takes place from 3rd clock to 14th clock from MSB to LSB (which is first half of one cycle){reference – ADC data sheet}. Each clock during the conversion is giving current spike due to charge redistribution. We can see that current spike is nonlinear varying from MSB to LSB. Max current taken by reference pin SAR ADC during conversion is 600µA for 1V input. This current varies with input magnitude. This leads to a nonlinear variation in the output of the reference device which introduces harmonic distortion in the ADC output as the [Voltage-reference impact on total harmonic distortion white paper](#) shows.

To increase switching load driving capability, a capacitor must be placed very near to reference pin of SAR ADC. Stability of the reference must also be considered while selecting the cap.

If the current demand is very high (in case a reference is driving more than one ADC), a low noise buffer at the output can be used.

The other care about is the trace resistance from output pin of shunt reference to the reference pin of ADC. Max voltage drop across trace must be much less than $LSB/2$. Voltage drop across the trace is equal to $R_{trace} \times I_{max}$. This directly gets added to the load regulation error. One needs to also minimize trace lengths to reduce the trace inductance. To minimize this error the reference must be placed very close to the VREF pin of the ADC. If the reference has VOUT sense pin then problem of trace resistance can be eliminated by connecting output sense pin to reference pin of ADC.

8 Low Power Applications

In low-power high-accuracy designs, limiting the IQ for each component of a signal chain while not degrading the performance of the design is critical. A generic signal chain, usually have components like sensors, amplifiers, converters, micro controllers, voltage references, interfaces, and so on; which contribute to the overall current budget of the design. Hence to reduce the power consumption of the design, choose components that operate at lower quiescent current.

Field Transmitter is one such example of a low IQ design where current contribution from each component can affect the power budget of the system. Typical power budget for a field transmitter is shown in [Figure 8-1](#).

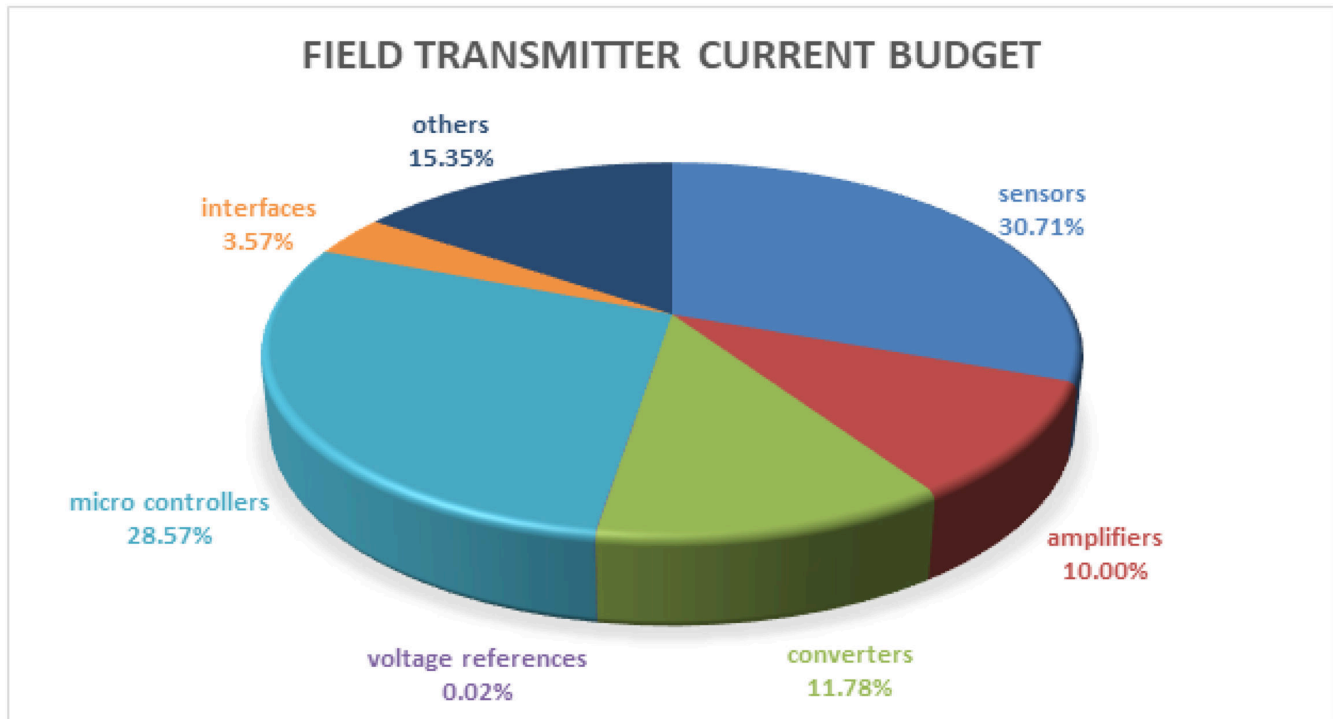


Figure 8-1. Typical Power Budget of a Field Transmitter

[Figure 8-1](#) shows that the current contribution from REF35 voltage reference IC is just 0.02% of the total current budget (3mA typical for a 2-wire transmitter), hence choosing REF35 does not burden the total current budget heavily. Although REF35 operates at a very low (650nA) quiescent current, REF35 does not compromise with the series reference specs. REF35 provides very high initial accuracy (0.05%), very low temperature drift (12ppm/C) and very low inherent noise.

Furthermore, REF35 has Shutdown Mode which is an additional feature. This feature can be enabled to reduce the quiescent current of the device to less than 0.1uA by pulling down the enable pin on the IC. This helps to bring down the overall power consumption of the signal chain in the standby mode.

Therefore, in low power high accuracy designs where the system specs cannot be compromised, choosing right voltage reference for high precision ADCs becomes very important. Hence selecting a reference like REF35 enables designers to develop low power designs without sacrificing with the accuracy.

9 References

- Texas Instruments, [TI Precision Labs - ADCs](#)
- Texas Instruments, [Voltage-reference impact on total harmonic distortion white paper](#)
- Texas Instruments, [Voltage reference selection basics white paper](#)
- Texas Instruments, [Choosing the Voltage Reference for Your Automotive Application - Application Brief](#)
- Texas Instruments, [Tips and tricks for designing with voltage references E-book](#)

10 Revision History

NOTE: Page numbers for previous revisions may differ from page numbers in the current version.

Changes from Revision A (March 2021) to Revision B (January 2024) Page

- Updated the ADC and DAC recommendations..... 2
 - Added new data for REF35..... 2
-

Changes from Revision * (December 2018) to Revision A (March 2021) Page

- Updated the numbering format for tables, figures, and cross-references throughout the document..... 2
 - Added REF70 to table 2-1..... 2
 - Added ADC and DAC recommendations to table 2-1..... 2
 - Updated noise example..... 8
-

IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATA SHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, regulatory or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you will fully indemnify TI and its representatives against, any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to [TI's Terms of Sale](#) or other applicable terms available either on [ti.com](https://www.ti.com) or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products.

TI objects to and rejects any additional or different terms you may have proposed.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2024, Texas Instruments Incorporated